

**GPON ONU STICK SFP (MAC Inside) USER MANUAL
BD-1234-SPM**

Device Status

▲ 不安全 | 192.168.1.1 🏠 ☆ □

Gmail 7 Week Action Plan

[Logout](#)

ONU Stick Module	ONU Stick Module
	System Status Advanced Config System Management User Management

[System Status](#)

[PON Status](#)

Device Status

This page shows the current status and some basic settings of the device.

System	
Device Name	PON Bridge
Uptime	4 min
Firmware Version	V1.9.0-191015
CPU Usage	50%
Memory Usage	45%
LAN Configuration	
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
MAC Address	80071bd4d7c4

[Refresh](#)

PON Status

ONU Stick Module	ONU Stick Module
	System Status Advanced Config System Management User Management

[System Status](#)

[PON Status](#)

PON Status

This page shows the current system status of PON.

PON Status	
Vendor Name	BAUDCOM
Part Number	BD-1234-SPM
Temperature	46.472656 C
Voltage	3.426200 V
Tx Power	-inf dBm
Rx Power	-inf dBm
Bias Current	0.000000 mA
GPON Status	
ONU State	O1
ONU ID	0
LOID Status	Initial Status

[Refresh](#)

GPON Config

ONU Stick Module
ONU Stick Module

[System Status](#) | [Advanced Config](#) | [System Management](#) | [User Management](#)

[GPON Config](#)

[LAN Config](#)

GPON Settings

This page is used to configure the parameters for your GPON network access.

LOID:
LOID Password:
PLOAM Password:
Serial Number:
OMCI OLT Mode:

Default Mode
Huawei OLT Mode
ZTE OLT Mode
Customized Mode

LAN Interface settings

ONU Stick Module
ONU Stick Module

[System Status](#) | [Advanced Config](#) | [System Management](#) | [User Management](#)

[GPON Config](#)

[LAN Config](#)

LAN Interface Settings

This page is used to configure the LAN interface of your Device. Here you may change the setting for IP addresses, subnet mask, etc..

InterfaceName:
IP Address:
Subnet Mask:

Flow statistics

ONU Stick Module
ONU Stick Module

[System Status](#) | [Advanced Config](#) | [System Management](#) | [User Management](#)

[Flow Statistics](#)

[Backup/Restore](#)

[Logout](#)

[Language Select](#)

[Reset](#)

This page shows the packet statistics for transmission and reception regarding to network interface.

Interface	Rx pkt	Rx err	Rx drop	Tx pkt	Tx err	Tx drop
LAN	118	0	0	57	0	0

Backup and Restore Setting

ONU Stick Module	ONU Stick Module			
	System Status	Advanced Config	System Management	User Management
Flow Statistics	<h3>Backup and Restore Settings</h3> <p>This page allows you to backup current settings to a file or restore the settings from the file which was saved previously. Besides, you could reset the current settings to factory default.</p> <hr/> <p>Backup Settings to File: <input type="button" value="Backup..."/></p> <p>Restore Settings from File: <input type="button" value="选择文件"/> 未选择任何文件 <input type="button" value="Restore"/></p> <p>Reset Settings to Default: <input type="button" value="Reset"/></p>			
Backup/Restore				
Logout				
Language Select				
Reset				

User management

ONU Stick Module	ONU Stick Module			
	System Status	Advanced Config	System Management	User Management
PON Statistics	<p>This page is used to set the account to access the web server of your Device. Empty user name and password will disable the protection.</p> <hr/>			
Account Manage	<p>UserName: <input type="text" value="admin"/></p> <p>Old Password: <input type="text"/></p> <p>New Password: <input type="text"/></p> <p>Confirmed Password: <input type="text"/></p> <p><input type="button" value="Apply Changes"/></p>			