



MODEL : BD-ONU-802RWT-H 1GE+1FE+WIFI+CATV

MODEL : BD-ONU-414RWT-H 1GE+3FE+POTS+WIFI+CATV

XPON ONU USER MANUAL

Release Date 2019-04-26

Contents

<i>Chapter 1 Product Introduction</i>	1
1.1 Product Description.....	1
1.2 Special features.....	2
1.3 Technical Parameter.....	2
1.4 Application chart.....	3
1.5 Panel description.....	4
<i>Chapter 2 Quick Installation</i>	6
2.1 Standard Packing Contents.....	6
2.2 Quick Installation	7
<i>Chapter 3 Configuration</i>	8
3.1 Login.....	8
3.2 Status	9
3.2.1 Device Information	9
3.2.2 Network Info.....	9
3.2.3 User Information.....	11
3.2.4 Voip Status.....	12
3.2.5 Remote Admin Status	13
3.3 Network	14
3.3.1 WAN Configuration.....	14
3.3.2 Port Binding	16
3.3.4 LAN Configuration.....	16
3.3.5.1 Qos Configuration	18
3.3.6 WLAN Configuration	20
3.3.7 Remote Admin.....	22
3.3.8 Time Configuration	22
3.3.9 Route Configuration.....	23

3.4 Security	23
3.4.1 Firewall.....	23
3.4.2 MAC Filter.....	24
3.4.3 Port Filter.....	24
3.4.4 URL Filter	25
3.4.5 WLAN MAC Filter	26
3.5 Application	26
3.5.1 DDNS Configuration	26
3.5.2 Advanced NAT Configuration	27
3.5.3 VOIP Configuration	28
3.5.4 IGMP Configuration	30
3.5.5 UPNP Configuration	31
3.5.6 VPN Service.....	31
3.6 Admin	32
3.6.1 User Management	32
3.6.2 Device Management.....	32
3.6.3 Log File Configuration	33
3.6.4 LOID.....	34
3.6.5 Language	35
3.6.6 CATV.....	35
3.6.7 Access Control	35
3.6.8 LoopBack	36
3.6.9 Port Admin.....	36
3.7 Diagnosis	37
3.7.1 Network Diagnosis	37
3.8 Help	38
<i>Chapter 4 Examples.....</i>	<i>39</i>
4.1 Internet service	39
4.1.1 Requirement.....	39
4.1.2 Steps.....	39



Chapter 5 FAQ.....	42
--------------------	----

Chapter 1 Product Introduction

1.1 Product Description

Thank you for choosing the 1G3F+WIFI+CATV+POTS XPON ONU. The product is designed as HGU (Home Gateway Unit) in deferent FTTH solutions. The carrier-class FTTH application provides data service access. It is based on mature and stable, cost-effective XPON technology. XPON can switch automatically with EPON and GPON mode when it accesses to the EPON OLT or GPON OLT. It adopts high reliability, easy management, configuration flexibility and good quality of service (QoS) guarantees to meet the technical performance of the module of Telecom EPON CTC3, and GPON Standard of ITU-TG.984.

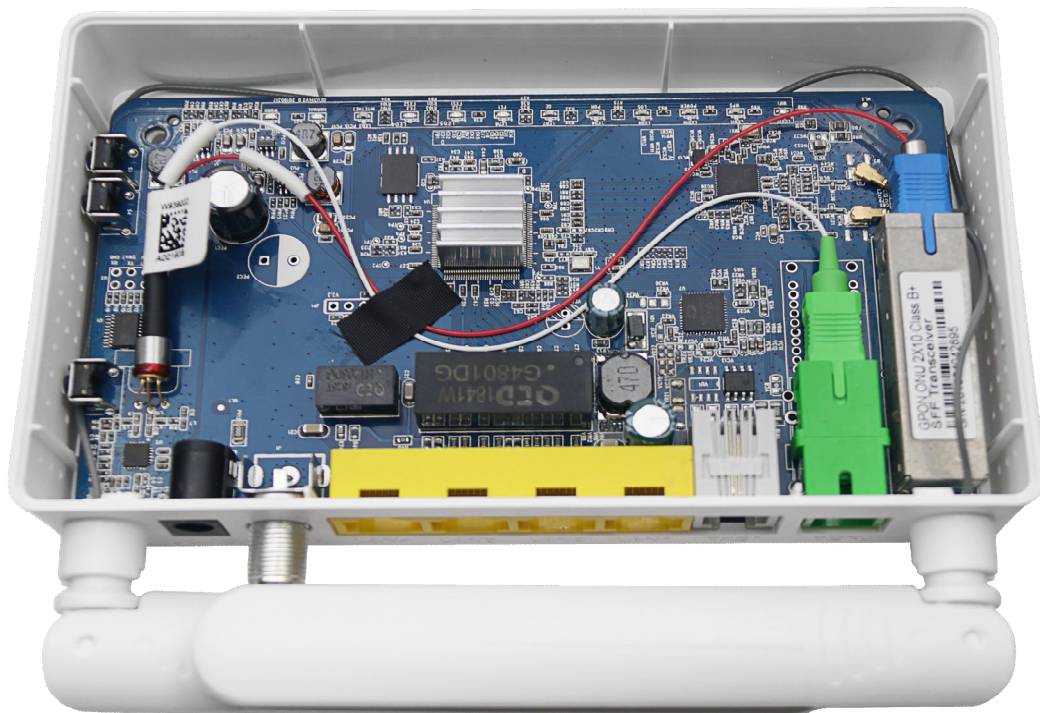


Figure 1-1: 1G3F+WIFI+CATV+POTS XPON ONU

1.2 Special features

- Support EPON and GPON Mode
- Support ONU auto-discovery/Link detection/remote upgrade of software
- WAN connections support Route and Bridge mode
- Route mode supports PPPoE/DHCP/ static IP
- Support IPv4/IPv6
- Support WIFI Interface and multiple SSID
- Support QoS and DBA
- Support port vlan configuration
- Support Firewall function and IGMP snooping multicast feature
- Support LAN IP and DHCP Server configuration;
- Support Port Forwarding and Loop-Detect
- Support TR069 remote configuration and maintenance
- Support Pots interface for Voip Service
- Support CATV interface for Video Service
- Specialized design for system breakdown prevention to maintain stable system

1.3 Technical Parameter

Technical item	Details
PON Interface	1 G/EPON port(EPON PX20+ and GPON Class B+) Receiving sensitivity: $\leq -27\text{dBm}$ Transmitting optical power: $0\sim +4\text{dBm}$ Transmission distance: 20KM
Wavelength	TX: 1310nm, RX: 1490nm
Optical Interface	SC/UPC Connector (SC/APC Connector for CATV)
POTS interface	1 FXS, RJ11 connectors Support: G.711/G.723/G.726/G.729 codec Support: T.30/T.38/G.711 Fax mode, DTMF Relay Line testing according to GR-909
LAN Interface	LAN port for GE and FE automatic adaptive mode. Full/Half, RJ45 connector
CATV Interface	RF, optical power: $+2\sim -18\text{dBm}$ Optical reflection loss: $\geq 45\text{dB}$ Optical receiving wavelength: $1550\pm 10\text{nm}$ RF frequency range: 47~1000MHz, RF output impedance: 75 Ω

	RF output level: 78dBuV AGC range: 0~-15dBm MER: ≥32dB@-15dBm
Wireless	Compliant with IEEE802.11b/g/n, Operating frequency: 2.400-2.4835GHz Support MIMO, Rate up to 300Mbps, 2T2R,2 external antenna 5dBi, Support: multiple SSID Channel: Auto Modulation type: DSSS, CCK and OFDM Encoding scheme: BPSK, QPSK, 16QAM and 64QAM
Push-Button	3,For Function of Reset、WLAN、WPS
Operating Condition	Temperature: 0℃~+50℃ Humidity: 10%~90% (non-condensing)
Storing Condition	Temperature: -30℃~+60℃ Humidity: 10%~90% (non-condensing)
Power Supply	DC 12V/1A
Power Consumption	≤6W
Dimension	155mm×92mm×34mm (L×W×H)
Net Weight	≤0.24Kg

Table 1: Technical parameters

1.4 Application chart

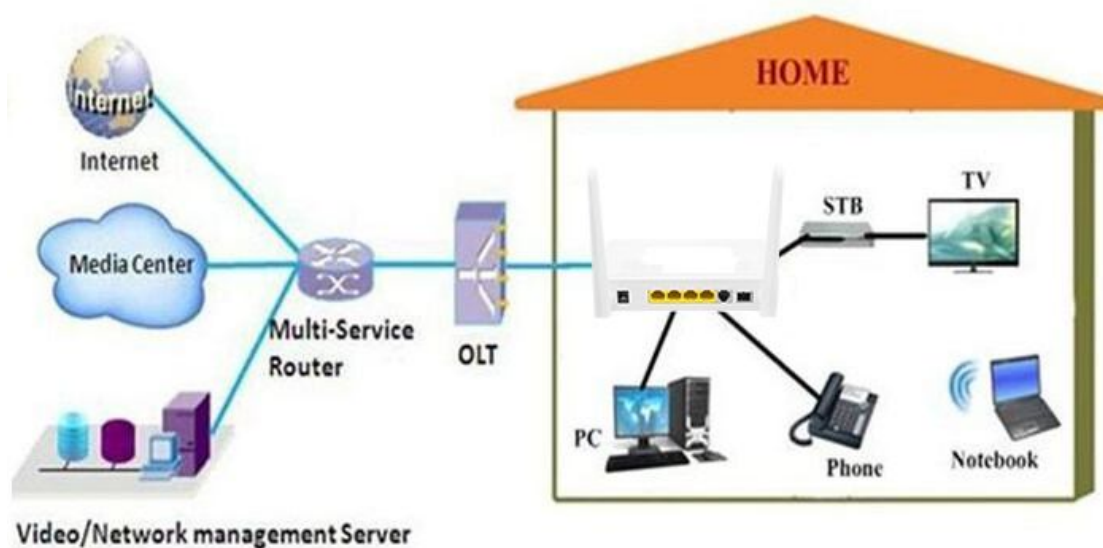


Figure 1-2: Application chart

1.5 Panel description

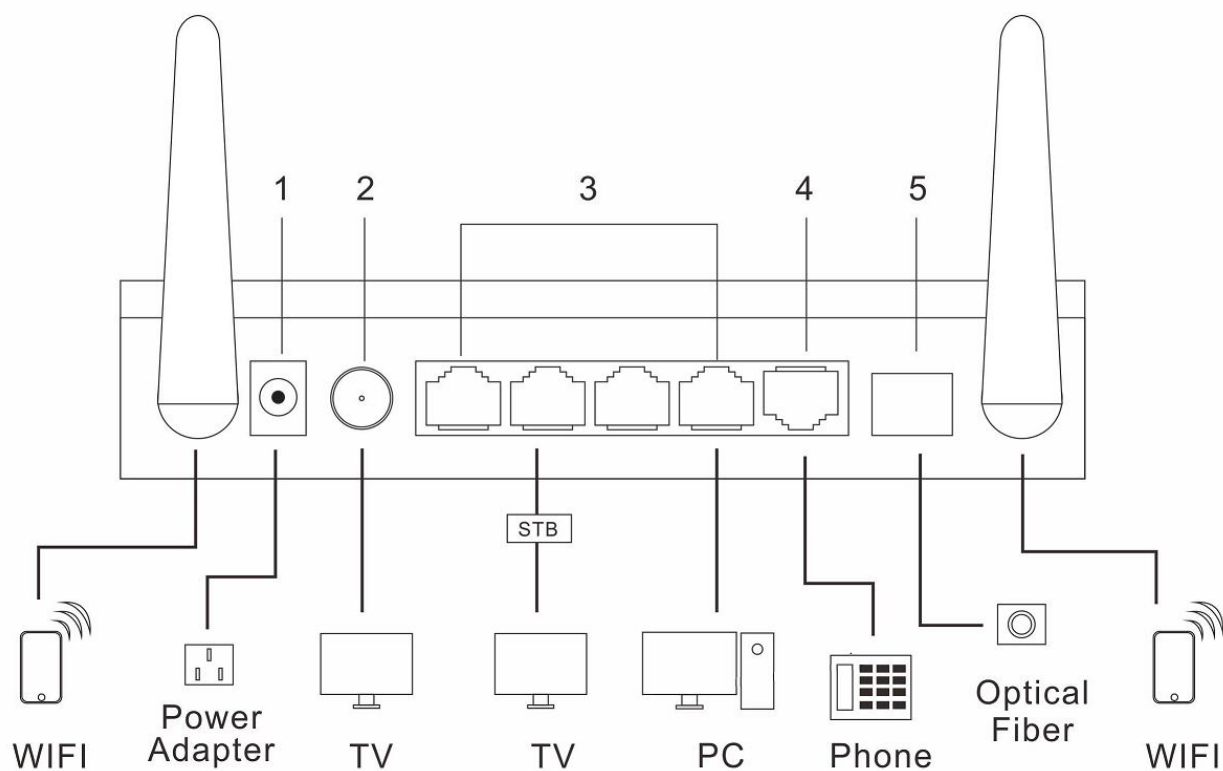


Figure 1-3: Rear View for multiple port

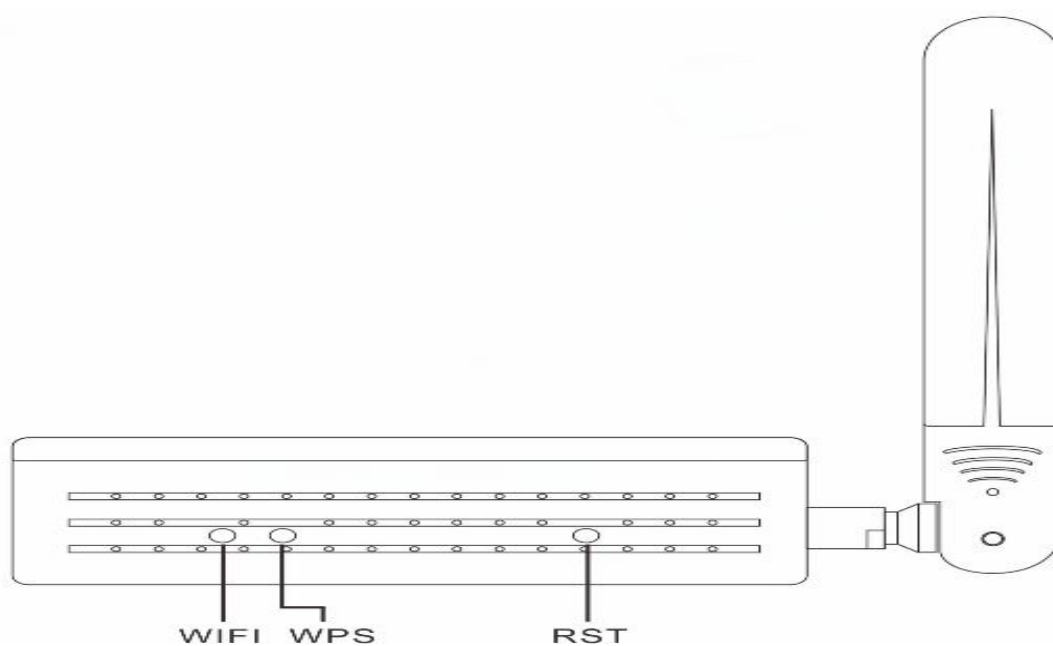


Figure 1-4: Push button Panel

WIFI WPS POWER LOS PON LAN1 LAN2 LAN3 LAN4 FXS1 NORMAL WORN

Figure 1-5: Led Panel

LED	Status	Description
POWER	On	The device is powered up.
	Off	The device is powered down.
PON	On	The device has registered to the PON system.
	Blink	The device is registering the PON system.
	Off	The device registration is incorrect.
LOS	Blink	The device does not receive optical signals.
	Off	The device has received optical signal.
SYS	On	The device system runs normally.
	Off	The device system runs abnormally.
WIFI	On	The WIFI interface is up.
	Blink	The WIFI interface is sending or/and receiving data (ACT).
	Off	The WIFI interface is down.
WPS	Blink	The WIFI interface is securely establishing a connection.
	Off	The WIFI interface does not establish a secure connection.
FXS	On	Phone has registered to the SIP Server.
	Blink	Phone has registered and data transmission (ACT).
	Off	Phone registration is incorrect.
LAN1~LAN4	On	Ethernet connected properly (LINK).
	Blink	Ethernet is sending or/and receiving data (ACT).
	Off	Ethernet connection exception or not connected.
Worn (CATV)	On	Input optical power is higher than 3dbm or lower than -13dbm
	Off	Input optical power is between -13dbm and 3dbm
Normal (CATV)	On	Input optical power is between -13dbm and 3dbm
	Off	Input optical power is higher than 3dbm or lower than -13dbm

Table 2: Panel Lights Description

Chapter 2 Quick Installation

2.1 Standard Packing Contents

When you receive our products, please check carefully to make sure that our products whether have some defects or not. If something wrong with shippings, please contact carrier; other damage or lack of some parts, please contact with dealer.

Contents	Description
ONU	1 pcs
Power Adapter	1 pcs
User Manual	1 pcs

Table 3: Packing Contents



Figure 2-1: Actual package content

2.2 Quick Installation

1. Connecting the optical fiber cable to the unit.
 - a) Remove the protective cap of the optical fiber.
 - b) Clean the end of the optical fiber with an optical fiber end cleaner.
 - c) Remove the protective cap of the ONU optical interface (PON interface). Connect the fiber to the PON port on the unit.

Note: When measuring the optical power before connecting to the ONU, it is recommended to use a PON Inline Power Meter. The receiver optical power should be between -7dbm and -28 dbm by using 1490nm.

While connecting, please note:

- Keep the optical connector and the optical fiber clean.
 - Make sure there are no tight bends in the fiber and that the bending diameter is greater than 6cm. Otherwise, the optical signal loss may be increased, to the extent that signal may be unavailable.
 - Cover all optic ports and connectors with protective cap to guard against dust and moisture when the fiber is not used.
2. Apply power to the unit. If the product has the power button, please push the power button before used.
 3. After the ONU is power ON, Indicators should light up as for normal operation. Check whether the PON interface status LED (PON) is on continuously. If it is, the connection is normal; otherwise there is either problem of the physical connection or the optical level at either end. This may be caused by either too much or too little attenuation over the optical fiber. Please refer to the Panel Lights Description for normal LED activity.
 4. Check all signal levels and services on all the ONU communication ports.

Unit Installation Adjustment

Installing the ONU on a horizontal surface (Bench top)

Put the ONU on a clean, flat, sturdy bench top. You must keep the clearance for all sides of the unit to more than 10cm for heat dissipation.

Chapter 3 Configuration

After finishing the basic connection configuration, you can use its basic function. In order to satisfy individuation service requirements, this charter provides the user parameter modification and individuation configuration description.

3.1 Login

The device is configured by the web interface. The following steps will enable you to login:

- 1、Conform “2.2 Quick Installation” to install;
- 2、The device management default IP address is 192.168.1.1;
- 3、Open your web browser, type the device IP in address bar;
- 4、Entry of the user name and password will be prompted. Enter the default login user name and password.

By default, there are two user levels for management. Administration level user name is "superadmin", password is "superadmin". Normal level user name is "admin", password is "admin".

The Administration account is able to access and modify all settings of ONU. It also can modify user account's username and password.

The normal account can only be used to view configurations, status and configure few parameters.



Figure 3-1: Login

3.2 Status

This part shows the main information of device and the active status about major services.

3.2.1 Device Information

This page shows the basic information about device, such as Device Type, PON MODE, Device Model, PON MAC /SN, Software Version, Register State.

Status							Exit
	Status	Network	Security	Application	Admin	Diagnosis	Help
	Device Info	Network Info	User Info	VOIP Status	Remote Admin Status		
Device Basic Information							
Device Type		1G3F+WIFI+CATV+VoIP					
Device Access Type:		EPON					
Device Model:							
Device MAC:		a8:bf:3c:00:e7:6a					
PON SN:		HDVT3c00e76a					
Hardware Version:		V1.0					
Software Version:		V1.01(2019-04-26 10:46:06)					
PON Register State:		Registered					
Uptime:		0 Days 0 Hours 4 Minutes 26 Seconds					

Figure 3-2: Device Information

3.2.2 Network Info

3.2.2.1 IPv4 WAN Connection Information

This page shows IPv4 WAN connection information you have configured.

Status

Exit

Status

Network

Security

Application

Admin

Diagnosis

Help

Device Info

Network Info

User Info

VOIP Status

Remote Admin Status

IPv4 Connection Status

IPv6 Connection Status

PON Status


WAN Name	Status	Connection Mode	Enable	VLAN	IP Address
1_TR069_R_VID_46	Connecting	DHCP	Enable	46	
2_INTERNET_R_VID_0	Connected	DHCP	Enable	0	172.19.0.101/255.255.0.0

WAN Name	WAN Mac	Gateway	DNS
1_TR069_R_VID_46	a8:bf:3c:00:e7:6a		
2_INTERNET_R_VID_0	a8:bf:3c:00:e7:69	172.19.0.1	172.19.0.1, 202.96.128.166

Figure 3-3: IPv4 WAN Information

3.2.2.2 IPv6 WAN Connection Information

This page shows IPv6 WAN connection information you have configured.

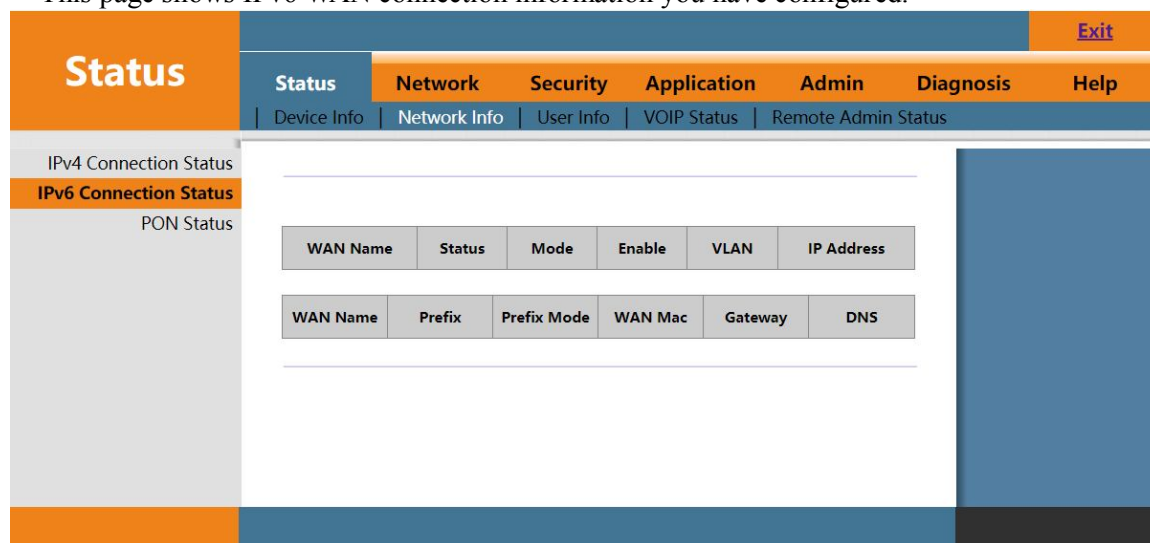

The screenshot shows the 'Status' page with the 'Network' tab selected. Under 'Network', 'Network Info' is chosen. The left sidebar shows 'IPv6 Connection Status' selected. The main content area displays two tables:


WAN Name	Status	Mode	Enable	VLAN	IP Address

WAN Name	Prefix	Prefix Mode	WAN Mac	Gateway	DNS

Figure 3-4: IPv6 WAN information

3.2.2.3 PON Information

This page shows the PON information, including Optical module information, Link Status, Performance statistics.

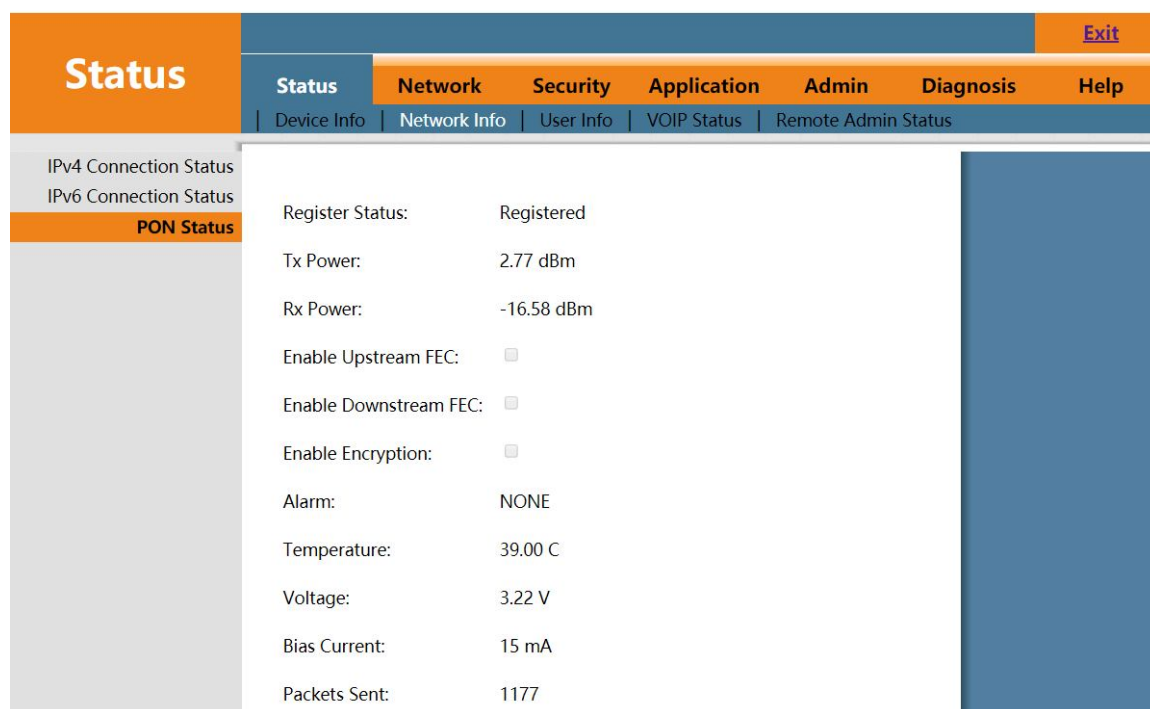

The screenshot shows the 'Status' page with the 'Network' tab selected. Under 'Network', 'Network Info' is chosen. The left sidebar shows 'PON Status' selected. The main content area displays the following information:

Register Status:	Registered
Tx Power:	2.77 dBm
Rx Power:	-16.58 dBm
Enable Upstream FEC:	☐
Enable Downstream FEC:	☐
Enable Encryption:	☐
Alarm:	NONE
Temperature:	39.00 C
Voltage:	3.22 V
Bias Current:	15 mA
Packets Sent:	1177

Figure 3-5: PON Status

3.2.3 User Information

3.2.3.1 LAN Interface Information

This page shows the Ethernet port information, including LAN Link Information, Transceiver statistics.

Status		Exit				
Status	Network	Security	Application	Admin	Diagnosis	Help
Device Info	Network Info	User Info	VOIP Status	Remote Admin Status		
Ethernet Interface						
WLAN Information						
DHCP Server Pool						
	IP Address	192.168.1.1				
	IPv6 Global Address	fe80::1				
	MAC Address	a8-bf-3c-00-e7-63				
LAN Interface	Link State	Mode	Rate	Rx/Tx Packets	Rx/Tx Bytes	
LAN1	Disconnected	Auto	Auto	756/872	261609/143690	
LAN2	Disconnected	Auto	Auto	0/719	0/60716	
LAN3	Connected	Full Duplex	100M	1056/1203	471683/236775	
LAN4	Disconnected	Auto	Auto	31/740	12703/60717	

Figure 3-6: LAN Interface Information

3.2.3.2 WLAN Interface Information

This page shows the WLAN Interface information, including basic WIFI information and WIFI Client information.

Status		Exit				
Status	Network	Security	Application	Admin	Diagnosis	Help
Device Info	Network Info	User Info	VOIP Status	Remote Admin Status		
Ethernet Interface						
WLAN Information						
DHCP Server Pool						
	WIFI State	Enable				
	Channel	6				
	RX Packets	1283				
	TX Packets	644				
	RX Bytes	214873				
	TX Bytes	83123				
	RX Error Packets	0				
	TX Error Packets	0				
	SSID1 Name	WIFI-e76a				
	Encryption Status	WPA/WPA2-PSK				
Index	Mac	Signal(dBm)	RX/TX Rate	Rx/Tx Packets	Rx/Tx Bytes	
1	80:2b:f9:c5:74:21	-77	65Mbps/72.2Mbps	121/34	23038/4981	

Figure 3-7: WLAN Interface Information

Status							Exit
	Status	Network	Security	Application	Admin	Diagnosis	Help
	Device Info	Network Info	User Info	VOIP Status	Remote Admin Status		
Register Status							
Phone Number	POTS1	121					

Figure 3-10: Phone Number Information

3.2.5 Remote Admin Status

3.2.5.1 TR069 Connection Status

This page shows the TR069 Inform Status and Remote Connection status.

Status							Exit
	Status	Network	Security	Application	Admin	Diagnosis	Help
	Device Info	Network Info	User Info	VOIP Status	Remote Admin Status		
TR-069 Status							
TR-069 Configuration Status	Inform Status						
	Do not inform (TR-069 connection is inactive).						
	Connection Request From ACS						
	Can't receive the connection request from ACS.						

Figure 3-11: TR069 Connection Status

3.2.5.2 TR069 Configuration Status

This page shows the TR069 Configuration Status.


Status							Exit
	Status	Network	Security	Application	Admin	Diagnosis	Help
	Device Info	Network Info	User Info	VOIP Status	Remote Admin Status		
TR-069 Status							
TR-069 Configuration Status	Configuration by ACS Status						
	Can't receive configuration from ACS						

Figure 3-12: TR069 Configuration Status

3.3 Network

3.3.1 WAN Configuration

This page allows the user to configure WAN connections. You can add/delete/modify WAN connections here. The device default settings about TR069 WAN and Route_Internet WAN Connections .

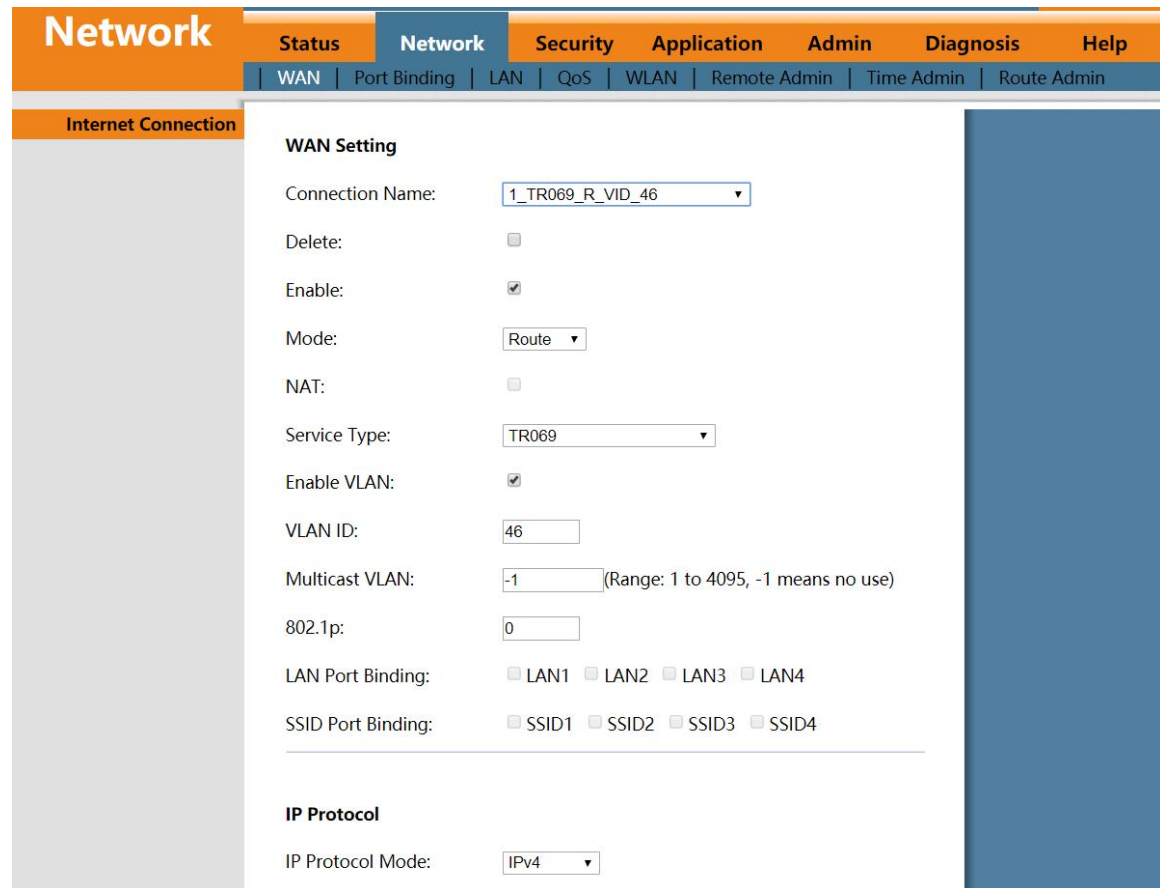

Network

Status Network Security Application Admin Diagnosis Help

WAN Port Binding LAN QoS WLAN Remote Admin Time Admin Route Admin

Internet Connection

WAN Setting

Connection Name: 1_TR069_R_VID_46

Delete: ☐

Enable: ☒

Mode: Route

NAT: ☐

Service Type: TR069

Enable VLAN: ☒

VLAN ID: 46

Multicast VLAN: -1 (Range: 1 to 4095, -1 means no use)

802.1p: 0

LAN Port Binding: ☐ LAN1 ☐ LAN2 ☐ LAN3 ☐ LAN4

SSID Port Binding: ☐ SSID1 ☐ SSID2 ☐ SSID3 ☐ SSID4

IP Protocol

IP Protocol Mode: IPv4

Figure 3-13: WAN Setting


Parameter	Description
Connection Name	The list of WAN connection name that would be created according to the detail WAN Configuration. If you want to create a new WAN connection, please select “Create a new WAN connection” and input other Parameter at the same time and then click “OK” button. If you want to edit WAN connection, please select the wan connect name you want to edit and change some Parameter and then click “OK” button.

Delete	If you want to delete one connection, please select the wan connection you want to delete and then check “Delete” option.	
Enable	Enable or Disable the WAN Connection you have choosed.	
Mode	Route/Bridge. The device works on route mode with this WAN connection.	
NAT	If you select Route WAN Connection,the NAT option is default enable.If you select Bridge WAN connection,the NAT option is default disable. Checked indicates the NAT Function is enabled.	
Service Type	Service mode indicates what the wan connection is used for. There are INTERET 、 TR069、 Other and Voip for choosing.	
VLAN	Enable VLAN	Checked indicates the packets are transmitted by the PON port take VLAN tag. Unchecked indicates the packets are transmitted by the PON port don’t take VLAN tag.
	VLAN ID	Input the VLAN ID you want to set. Range is 0~4094. Input 0 means don’t use any VLAN.
Multicast VLAN	Input the VLAN ID you want to set,according to the IPTV Confuiration.This option default value is -1,means no use.	
802.1P	Select VLAN priority you want to set. Range is 0~7.	
LAN Port Binding	Checked the LAN Port indicates that lan interface would act with this wan connection Route or Bridge.	
SSID Port Binding	Checked the SSID Port indicates that lan interface would act with this wan connection route or bridge.	
IP Protocol Mode	IPv4、 IPv6、 IPv4/IPv6	
MTU	Max transfer unit. Default Value (in Byte): 1500(static/DHCP) or 1492(PPPoE).	
WAN IP Mode	IPoE/PPPoE/Static	
PPPoE	Username	PPPOE account.
	Password	PPPOE password.
	Keep Alive Time	The PPP Link maintenance time. This parameter value default is 60S.
	PPPoE Mode	Continous or Connect on Demand
	Service Name	This option is not required generally, but if the PPPoE Server checks the option, you should input according to ISP.

3.3.2 Port Binding

3.3.2.1 Binding Mode

This page supports the LAN or SSID binding mode based on VLAN. Users could deploy different VLAN configuration according to actual demands.

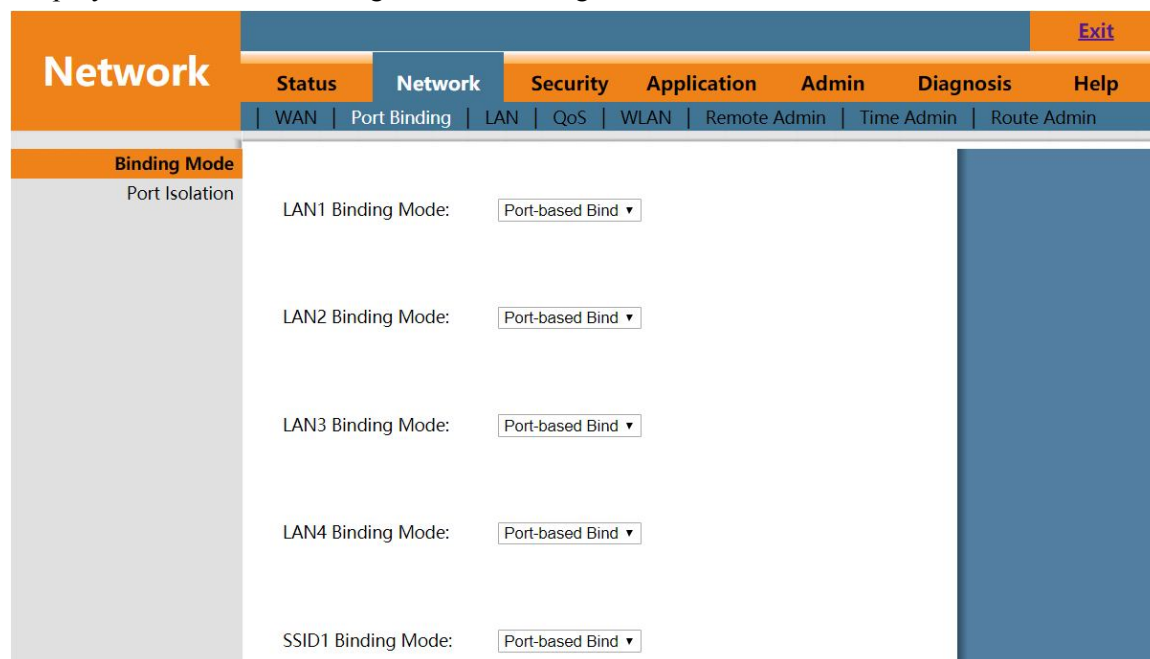


Network		Exit
Status	Network	Security
Application	Admin	Diagnosis
Help		
WAN	Port Binding	LAN
QoS	WLAN	Remote Admin
Time Admin	Route Admin	
Binding Mode		
Port Isolation		
LAN1 Binding Mode:	Port-based Bind	
LAN2 Binding Mode:	Port-based Bind	
LAN3 Binding Mode:	Port-based Bind	
LAN4 Binding Mode:	Port-based Bind	
SSID1 Binding Mode:	Port-based Bind	

Figure 3-14: Port Binding Mode

3.3.2.2 Port Isolation

This page allows the user to deploy whether ports need communicate with each other. If the Port Isolation function is enabled, all the ports can't access each other.

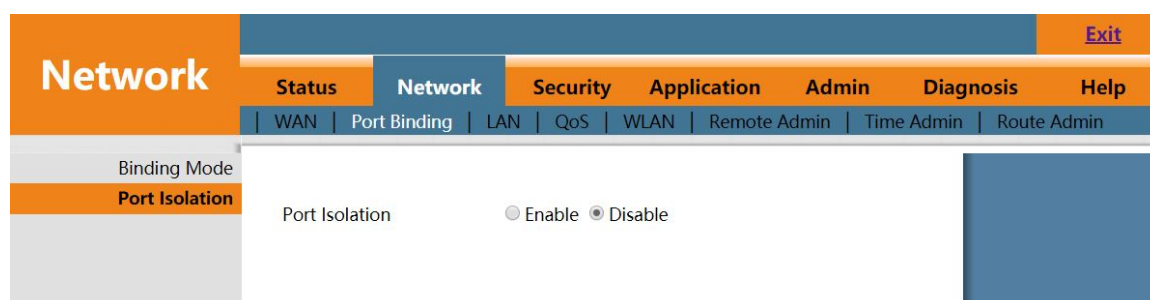

Network		Exit
Status	Network	Security
Application	Admin	Diagnosis
Help		
WAN	Port Binding	LAN
QoS	WLAN	Remote Admin
Time Admin	Route Admin	
Binding Mode		
Port Isolation		
Port Isolation	☐ Enable ☒ Disable	

Figure 3-15: Port Isolation

3.3.4 LAN Configuration

3.3.4.1 LAN IPv4 Address Settings

This page supports the management of the ONU's IPv4 address, DHCP Server management, including address distribution and relevant parameters distribution, such as lease time, address pool range, dns distribution.

Network

Status

Network

Security

Application

Admin

Diagnosis

Help

WAN

Port Binding

LAN

QoS

WLAN

Remote Admin

Time Admin

Route Admin

IPv4 Setting

IPv6 Setting

IP Address:

192.168.1.1

Subnet Mask:

255.255.255.0

Enable DHCP:

☒

Lease Time:

1 Day

IP Pool:

192.168.1.2

~

192.168.1.100

Figure 3-16: LAN IPv4 Address Settings

Enable DNS Relay:

☒

Primary DNS:

192.168.1.1

Secondary DNS:

8.8.8.8

Figure 3-17: DNS Settings

Parameter	Description
IP Address	LAN IP address.
Subnet Mask	LAN IP Subnet Mask.
Enable DHCP	Enable ONU DHCP Server.
Lease Time	Lease time of the ONU DHCP Server
IP Pool	The address range of DHCP Pool
Enable DNS Relay	Whether to enable DNS Realy
Primary DNS	The Primary DNS of DHCP Server
Secondary DNS	The Secondary DNS of DHCP Server

3.3.4.2 LAN IPv6 Settings

This page supports the management of the LAN IPv6 address, including LAN IPv6 Address Settings、LAN IPv6 DHCP configuration、RA Configuration

Network

Status

Network

Security

Application

Admin

Diagnosis

Help

WAN

Port Binding

LAN

QoS

WLAN

Remote Admin

Time Admin

Route Admin

IPv4 Setting

IPv6 Setting

IPv6 Link Local Address: fe80::1

Prefix Mode: Auto

IPv6 Prefix: no wan connected

Prefix Preferred Lifetime: 0 s

Prefix Valid Lifetime: 0 s

Enable RA: ☒

ManagementFlag: ☐

OtherConfigFlag: ☒

Max Interval Sent Time: 600 s

Min Interval Sent Time: 200 s

Enable DHCPv6 Server: ☒

Star IPv6 Address: 0:0:0:1 (IP Addr last 64 bits)

End IPv6 Address: 0:0:0:fffe (IP Addr last 64 bits)

DNSv6 Type: Relay

DNSv6 Mode: Auto

WAN Interface: no WAN contented

OK Cancel

Figure 3-18: LAN IPv6 Address Settings

3.3.5.1 Qos Configuration

3.3.5.1 Qos Settings

This page allows the user to configure Qos (quality of service) parameters, including enable option, uplink Bandwidth, Rule template and Scheduling Police.

QoS Settings
Rules Settings

Enable QoS configuration: ☐

Uplink Bandwidth: (0-1024000)Kbps

Scheduling Polic:

Business Classification

Rule template:

Queue	Priority	Enable
Q1	Highest	☒
Q2	High	☒
Q3	Middle	☒
Q4	Low	☒

Business name	Queue
TR069	1
VOIP	2
IPTV	3
OTHER	4

Figure 3-19:Qos Settings

Parameter	Description
Enable QoS configuration	Enable or Disable QoS function
Uplink Bandwidth	The Max rate of uplink transmission
Scheduling Polic	SP/WRR/CAR
Rule template	The various template about dirrerent services

3.3.5.2 Rule Settings

This page allows the user to deploy detail Queues through flow classification, such as LAN Port, Ethernet Type, Protocol, Vid, Source Mac, Destination Mac, Source IP, Destination IP, Source Port, Destination Port and etc.....

Rules Settings

Classification rules

LAN Port:

Ethernet Type:

Protocol:

Tos/Dscp:

Tos/Dscp:

Tci:

Vid:

Pbit:

Source MAC:

Destination MAC:

Source Start IP:

Source End IP:

Destination Start IP:

Destination End IP:

Source Start Port:

Source End Port:

Destination Start Port:

Figure 3-20: Rules Settings

3.3.6 WLAN Configuration

This page allows the user to deploy WLAN (WiFi) Configuration, including WLAN Enable option, SSID Name, Encryption options.

Parameter	Description
Enable	Checked indicates that WLAN function is enabled. Unchecked indicates that WLAN function is disabled.
Mode Selection	The Standard of WLAN Mode: B, G, N, B/G, B/G/N
Band Width	20MHz, 20/40MHz
SSID List	SSID1, SSID2, SSID3, SSID4. Support multiple SSID. SSID1 enable, SSID2/SSID3/SSID4 disable
SSID Name	WiFi name
SSID Broadcast	Enable indicates that Wlan client could find the SSID Disable indicates that Wlan client couldn't find the SSID

Encryption	Open ,WEP,WPA/WPA2 Personal, WPA/WPA2 Enterprise
WPA Password	The password of SSID
WPS Enable	Enable or disable WPS function

Network

Status

Network

Security

Application

Admin

Diagnosis

Help

WAN

Port Binding

LAN

QoS

WLAN

Remote Admin

Time Admin

Route Admin

WLAN Configuration

Basic Configuration

Enable:

☒

Mode Selection:

B/G/N Mixed Mode

Channel Selection:

Auto

Band Width:

20MHZ

Advanced Config

Rate:

Auto

TX Power:

100%

DTIM Interval Settings:

1

Beacon Interval:

100

SSID Settings

SSID List:

SSID1

SSID Name:

WIFI-

e76a

SSID Enable:

Enable

SSID Broadcast:

Enable

Encryption:

WPA/WPA2 Personal

WPA Version

WPA1/WPA2

WPA Encryption:

TKIP/AES

WPA Password:

12345678

WPS Enable

Enable

WPS Mode:


PBC

WPS Connection

Figure 3-21: WLAN Basic Configuration and Advanced Configuration

3.3.7 Remote Admin

This page allows the user to deploy TR069 Remote Management Configuration, including Server Address, Server User Name, Server Password, Client Username, Client Password and Cycle Reporting Interval, enable or disable Cycle Reporting.

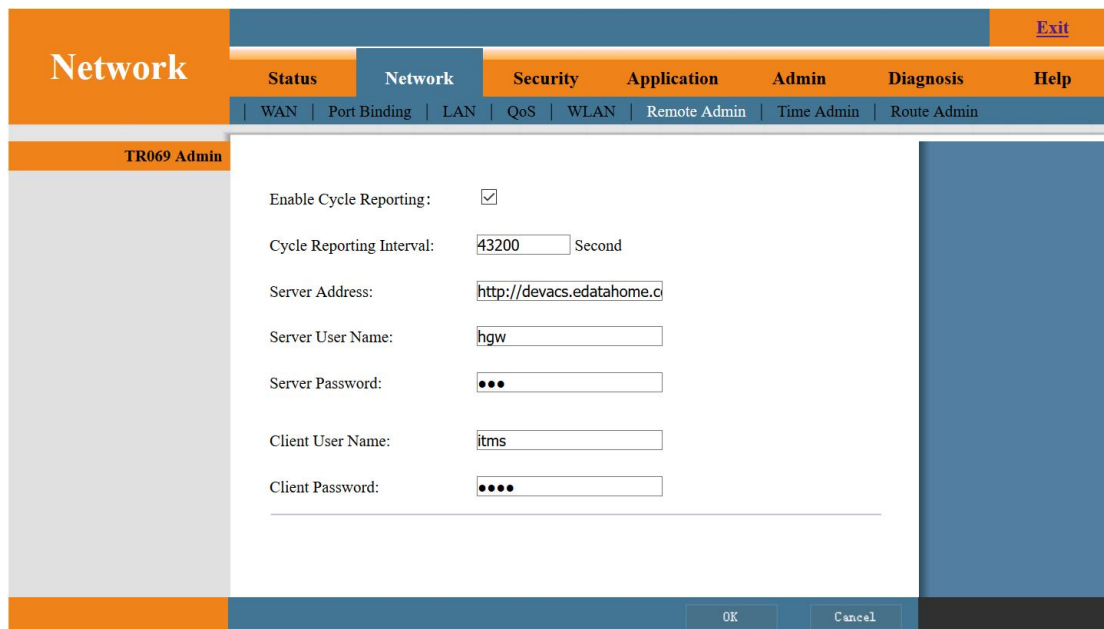

The screenshot shows the 'TR069 Admin' configuration page. The interface includes a top navigation bar with 'Network' selected, and a sub-menu with 'Status', 'Network', 'Security', 'Application', 'Admin', 'Diagnosis', and 'Help'. The 'Network' sub-menu is further divided into 'WAN', 'Port Binding', 'LAN', 'QoS', 'WLAN', 'Remote Admin', 'Time Admin', and 'Route Admin'. The 'Remote Admin' section is active, showing the following configuration options:


- Enable Cycle Reporting: ☒
- Cycle Reporting Interval: 43200 Second
- Server Address: http://devacs.edatahome.c
- Server User Name: hgww
- Server Password: [masked]
- Client User Name: itms
- Client Password: [masked]

At the bottom of the page, there are 'OK' and 'Cancel' buttons.

Figure 3-22: TR069 Configuration

3.3.8 Time Configuration

This page allows the user to configure NTP Client function. For this ,the user can get current time from the NTP Server.

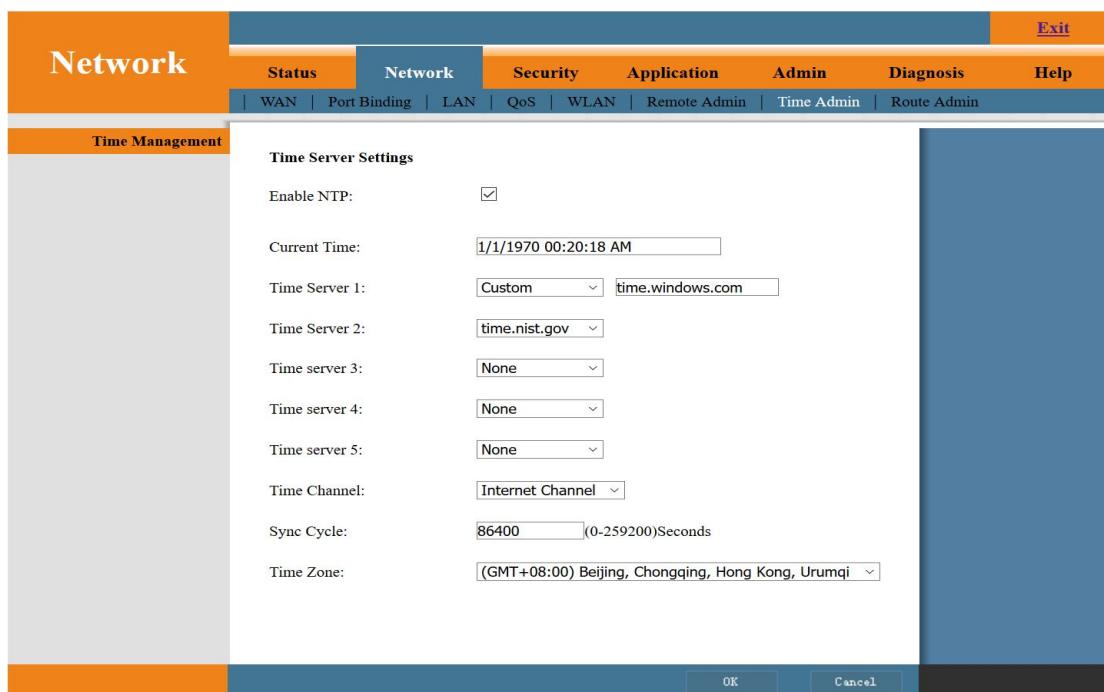

The screenshot shows the 'Time Management' configuration page. The interface includes a top navigation bar with 'Network' selected, and a sub-menu with 'Status', 'Network', 'Security', 'Application', 'Admin', 'Diagnosis', and 'Help'. The 'Network' sub-menu is further divided into 'WAN', 'Port Binding', 'LAN', 'QoS', 'WLAN', 'Remote Admin', 'Time Admin', and 'Route Admin'. The 'Time Admin' section is active, showing the following configuration options:


- Enable NTP: ☒
- Current Time: 1/1/1970 00:20:18 AM
- Time Server 1: Custom time.windows.com
- Time Server 2: time.nist.gov
- Time server 3: None
- Time server 4: None
- Time server 5: None
- Time Channel: Internet Channel
- Sync Cycle: 86400 (0-259200)Seconds
- Time Zone: (GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi

At the bottom of the page, there are 'OK' and 'Cancel' buttons.

Figure 3-22: Time Admin

3.3.9 Route Configuration

This page allows the user to configure statics route function. For this, the user could deploy more options about network.

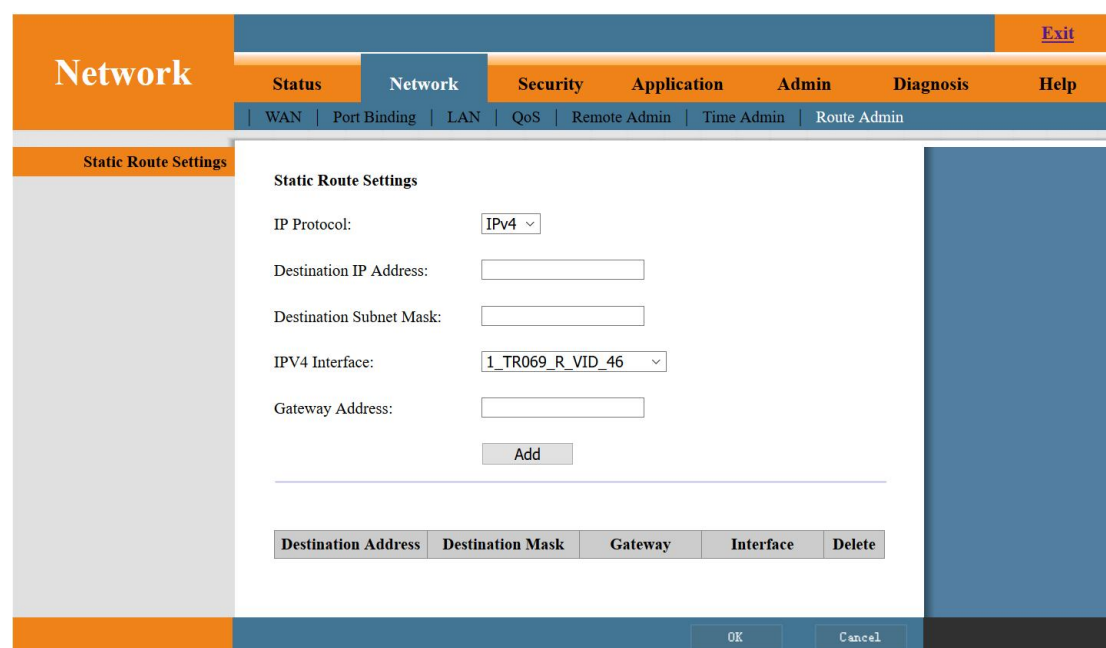

The screenshot shows the 'Static Route Settings' page in the Baudcom web interface. The top navigation bar includes 'Network', 'Status', 'Network', 'Security', 'Application', 'Admin', 'Diagnosis', and 'Help'. The 'Network' tab is active, and the 'Route Admin' sub-tab is selected. The main content area is titled 'Static Route Settings' and contains the following fields:

- IP Protocol:
- Destination IP Address:
- Destination Subnet Mask:
- IPv4 Interface:
- Gateway Address:

Below these fields is an 'Add' button. At the bottom of the form is a table with the following headers: Destination Address, Destination Mask, Gateway, Interface, and Delete. The table is currently empty. At the bottom right of the page are 'OK' and 'Cancel' buttons.


Figure 3-23: Static Route Configuration

3.4 Security

3.4.1 Firewall

3.4.1.1 Security Level

This page allows the user to set the level of the firewall. Low, Medium, High, three options are Available.

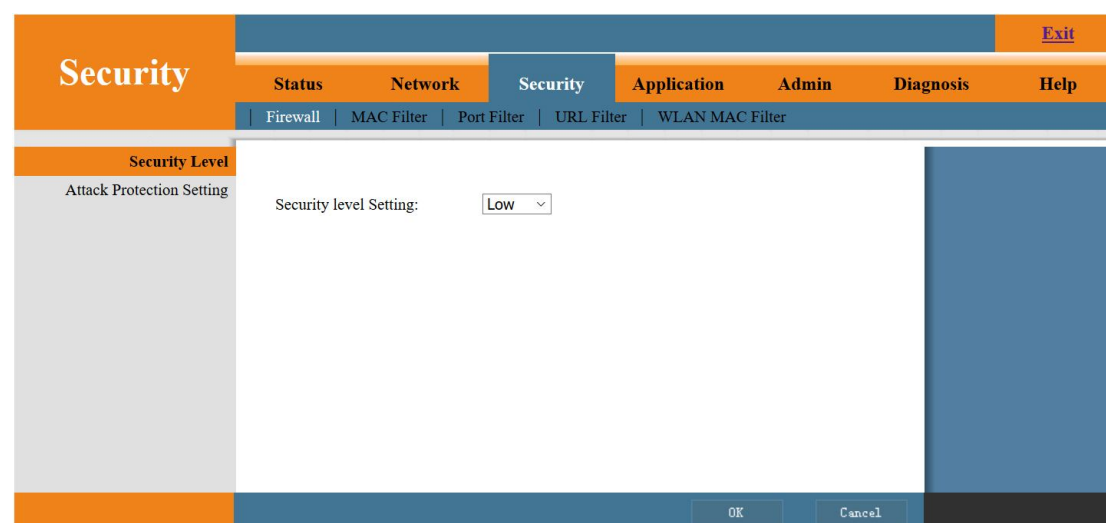

The screenshot shows the 'Security Level' page in the Baudcom web interface. The top navigation bar includes 'Security', 'Status', 'Network', 'Security', 'Application', 'Admin', 'Diagnosis', and 'Help'. The 'Security' tab is active, and the 'Firewall' sub-tab is selected. The main content area is titled 'Security Level' and contains the following fields:

- Attack Protection Setting:

At the bottom right of the page are 'OK' and 'Cancel' buttons.

Figure 3-24: Security Level

3.4.1.2 Attack Protection Setting

This page allows the user to set the protection against DOS attacks.

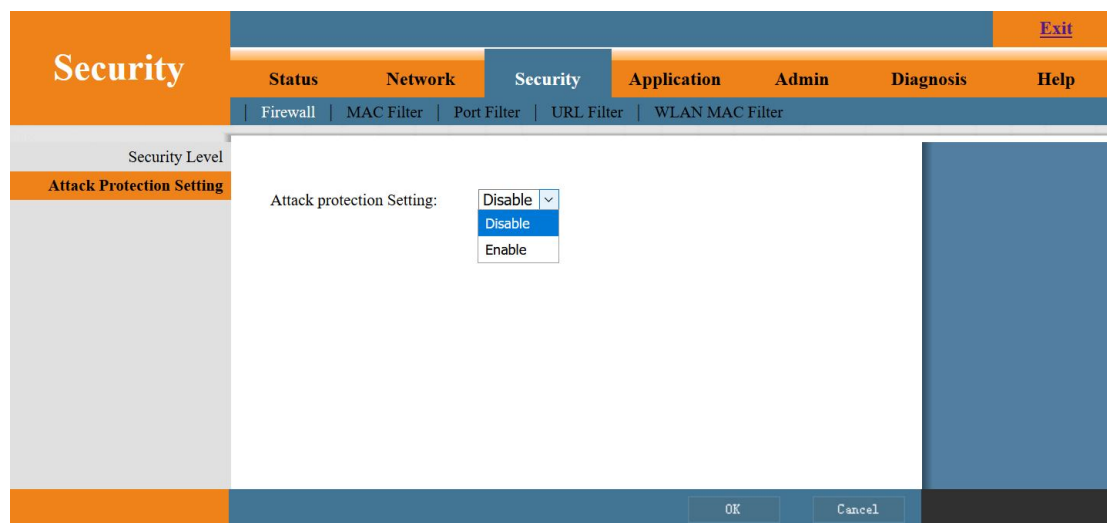


Figure 3-25: Attack Protection Configuration

3.4.2 MAC Filter

This page allows the user to set the relevant parameters of the MAC filter function, including black-list and white-list. The black-list indicates that forbidden access, white-list indicates that allow access.

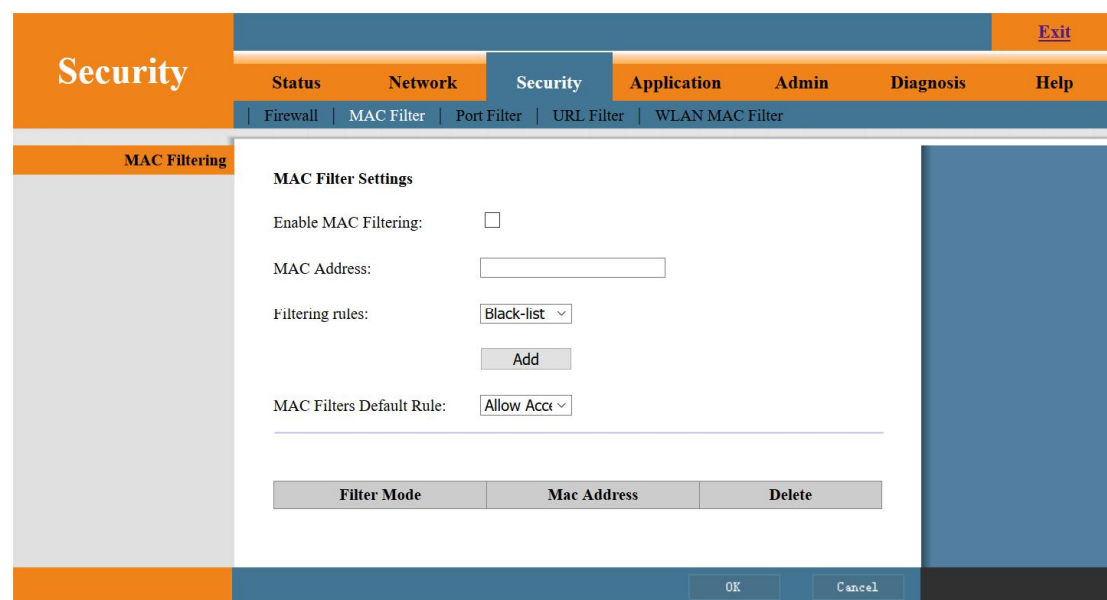


Figure 3-26: MAC Filter

3.4.3 Port Filter

This page allows the user to set the port filtering function. The rules are based on Source IP range and Destination IP range

Security

Status

Network

Security

Application

Admin

Diagnosis

Help

Firewall

MAC Filter

Port Filter

URL Filter

WLAN MAC Filter

Port filtering

Port Filter Settings

Enable Port Filter:

☐

Port Filter Mode:

Blacklist

Source IP Start:

Source IP End:

Destination IP Start:

Destination IP End:

Protocol:

ALL

ALL

TCP

UDP

TCP/UDP

ICMP

Filter mode	Source IP Start ~ Source IP End	Source Start Port ~ Source End Port	Destination IP Start ~ Destination IP End	Destination Start Port ~ Destination End Port	Protocol	Delete

OK

Cancel

Figure 3-27: Port Filter

3.4.4 URL Filter

This page allows the user to set the URL filter function (Attention, it supports http website not https website) .

Security

Status

Network

Security

Application

Admin

Diagnosis

Help

Firewall

MAC Filter

Port Filter

URL Filter

WLAN MAC Filter

URL Filter Settings

URL Filter Settings

Enable URL Filter:

☒

URL Address:

Filter Rules:

Blacklist

Add

URL Filter Default Rules:

Allow Accce

Filter Mode	URL Address	Delete


OK

Cancel

Figure 3-28: URL Filter

3.4.5 WLAN MAC Filter

This page allows the user to set the WLAN MAC filter function. If the wifi client mac address is in the black-list, it couldn't get access on the internet.

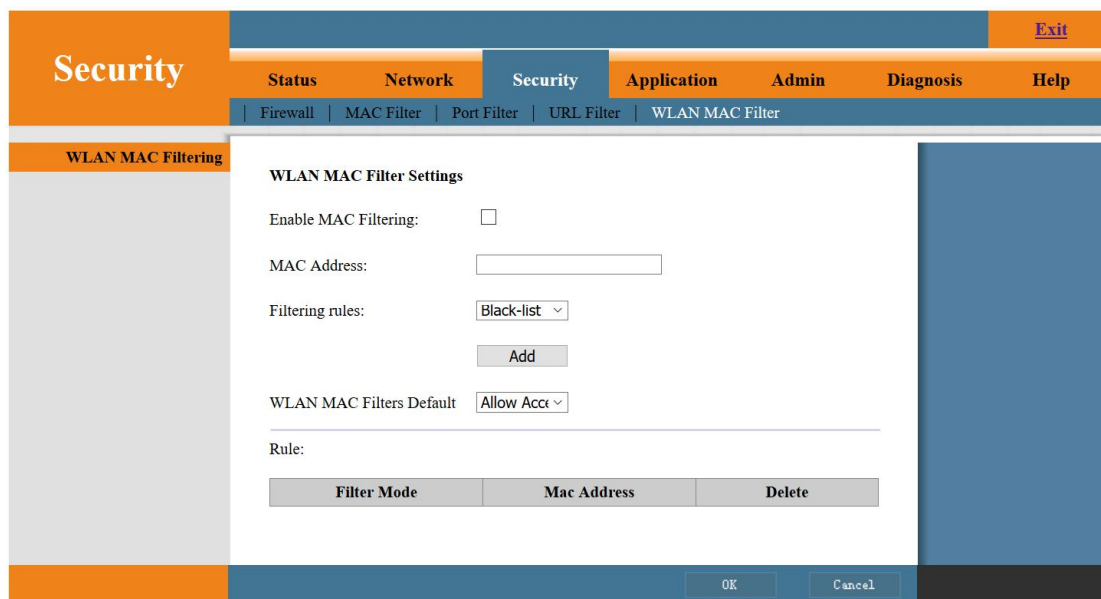

Security

Status Network **Security** Application Admin Diagnosis Help

Firewall MAC Filter Port Filter URL Filter WLAN MAC Filter

WLAN MAC Filtering

WLAN MAC Filter Settings

Enable MAC Filtering: ☐

MAC Address:

Filtering rules: Black-list

Add

WLAN MAC Filters Default Allow Access

Rule:

Filter Mode	Mac Address	Delete
-------------	-------------	--------

OK Cancel

Figure 3-29: WLAN MAC Filter

3.5 Application

3.5.1 DDNS Configuration

This page allows the user to set DDNS function.



Application

Status Network Security **Application** Admin Diagnosis Help

DDNS Advanced NAT VOIP IGMP UPNP VPN Service

DDNS Setting

WAN Interface: 2 INTERNET_R_VID

Enable: ☐

D-DNS Provider:

Domain Name:

Username:

Password:

OK Cancel

Figure 3-30: DDNS Configuration

3.5.2 Advanced NAT Configuration

This page allows the user to set Advanced NAT function, including ALG Configuration, DMZ Settings, Virtual Host Settings. (Attention ,there are some different description about Virtual Host Settings, such as Port Forwarding ,Port Mapping)

3.5.2.1 ALG Configuration

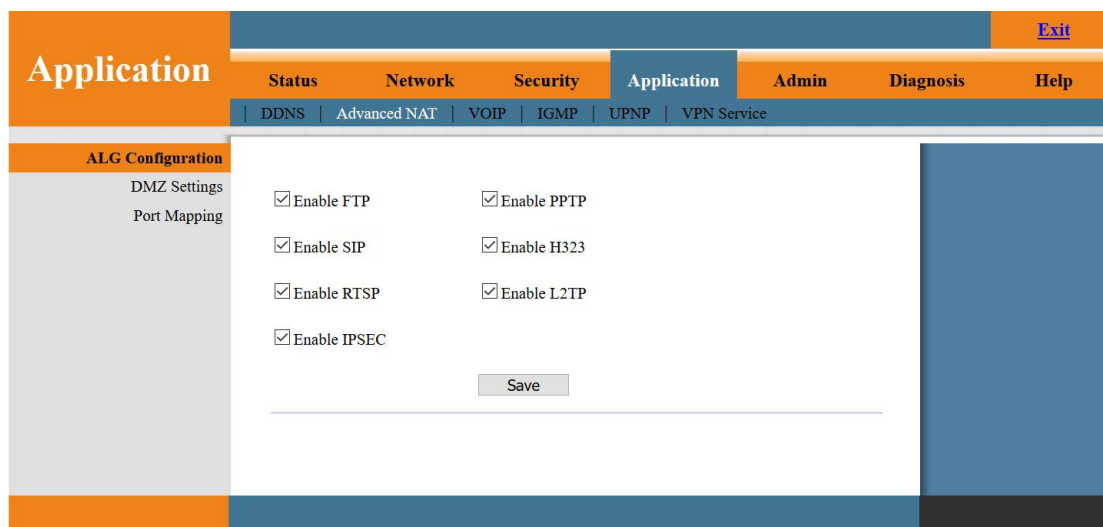


Figure 3-31: ALG Configuration

3.5.2.2 DMZ Configuration



Figure 3-32: DMZ Configuration

3.5.2.3 Virtual Host Settings Configuration

Application

Status

Network

Security

Application

Admin

Diagnosis

Help

DDNS

Advanced NAT

VOIP

IGMP

UPNP

VPN Service

ALG Configuration

DMZ Settings

Port Mapping

Service Name:

Customize Service

Protocol Type:

TCP

WAN Port Range:

~

WAN IP Range:

~

LAN Port Range:

~

LAN IP Address:

Enable Port Mapping:

☐

WAN Connection List:

2_INTERNET_R_VID_

Add

WAN Port	WAN IP	LAN Port	LAN IP	Protocol	Status	Delete
----------	--------	----------	--------	----------	--------	--------

Figure 3-33: Virtual Host Settings Configuration

3.5.3 VOIP Configuration

This page allows the user set VOIP Configuration, including two parts, Basic and Advance configuration.

3.5.3.1 VOIP Basic Configuration

Application		Status	Network	Security	Application	Admin	Diagnosis	Help
VoIP Basic								
VoIP Advanced								
Voice Mode:	SIP							
Server Type:	IMS-SIP							
Tone of County:	India							
Interface Binding:	India							
SIP Local Port:	5060							
SIP Proxy:	vskp.apsflms.in							
SIP Proxy Address:	172.18.4.81							
SIP Proxy Port:	5060							
SIP Outbound Proxy:	☒							
SIP Outbound Proxy Address:	172.18.4.81							
SIP Outbound Proxy Port:	5060							
SIP Registrar:	☒							
SIP Registrar Address:	vskp.apsflms.in							
SIP Registrar Port:	5060							
LCFO:	Close							
Polarity Reversal:	Open							
#Character Escape:	Open							

Match Mode:	Maximum Match
Short Digit Timer:	5 (s)
Long Digit Timer:	20 (s)
Dail Tone Duration:	15 (s)
Call Waiting:	☒
Call Forwarding:	☒
Call Conference:	☒
Min Flash Time:	150 (10-300ms)
Max Flash Time:	500 (200-1000ms)
Reg Expire:	3600 (s)
Register failed and retry interval:	60 (s)
Register Refresh Mode:	50%
Fax Mode:	Automatic
Enable HeartBeat:	☐
HeartBeat Cycle:	(s)
Howler Tone Duration:	60 (s)
Busy Tone Duration:	40000 (ms)
No Answer Timer:	60000 (ms)
SIP DSCP:	24
Blind Access Code:	*12*
Ask Access Code:	*12#
Enable Secondary Dialing:	☐
Outside Prefix:	(s)
Enable Implicit Registration:	☐

Dial plan

(x, T)

SIP Accounts	1
SIP Accounts	
Authen User Name	
Password	
Conference Resource Access Code	
SIP Subscribe	☐
Use Hot Line	☐
Hot Line Mode	☐ Immediately ☐ Delay
Hot Line Number	
Malicious-call Handle Mode	Softswitch Processing
Malicious Call Tracking Activation Code	

Figure 3-34: VOIP Basic Configuration

3.5.3.2 VOIP Advanced Configuration

Application		Status	Network	Security	Application	Admin	Diagnosis	Help
		DDNS	Advanced NAT	VOIP	IGMP	UPNP	VPN Service	

VoIP Basic
VoIP Advanced

Voice Mode: SIP

Telephone Account	1
Enable Account	☒
Echo Suppression	☒
Send Gain	0 dB
Recv Gain	0 dB
Mute Compression	Close
PacketTime	20ms
Fax Mode	T30 Full-c
Priority 1 Codec	1
Priority 2 Codec	2
Priority 3 Codec	3
Priority 4 Codec	4

RTP DSCP: 46
RFC2198 Payload Value: 96 (96-127)
DTMF Transport Mode: Inbound
DTMF RFC2833 Payload Type: 101 (97-101)

OK Cancel

Figure 3-35: VOIP Advanced Configuration

3.5.4 IGMP Configuration

This page allows the user to set IGMP SNOOPING、IGMP Proxy、MLD Configuration、MLD Proxy Configuration

Application		Status	Network	Security	Application	Admin	Diagnosis	Help
		DDNS	Advanced NAT	VOIP	IGMP	UPNP	VPN Service	

IGMP Setting


Enable Snooping:	☒	Enable Proxy
Enable PROXY:	☒	
Enable MLDSNOOPING	☐	
Enable MLDPROXY	☐	

OK Cancel

Figure 3-36: IGMP Configuration

3.5.5 UPNP Configuration

This page allows the user to set UPNP function. If enable UPNP, the device would open Port Mapping automatically according to what the client used.

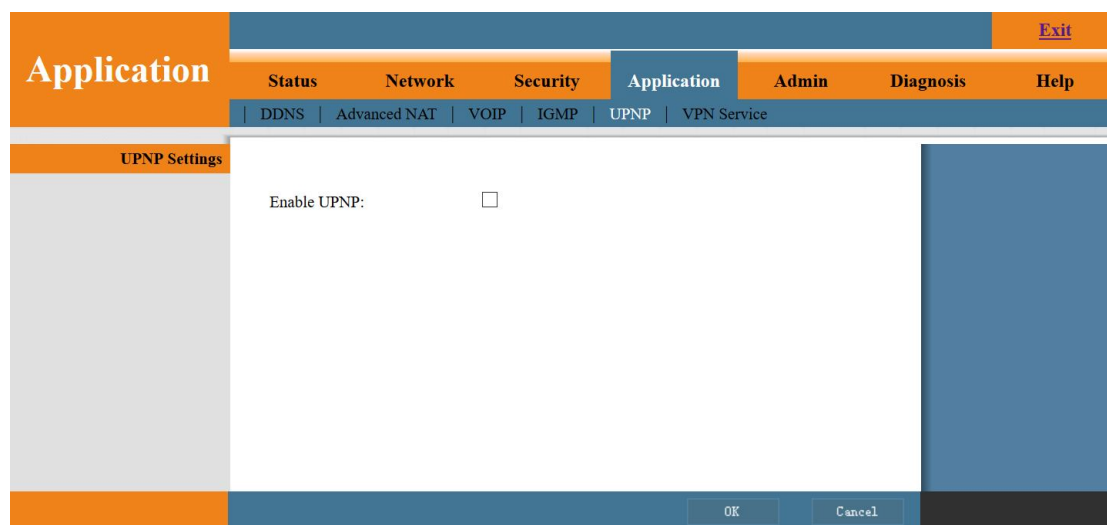

Application	Status	Network	Security	Application	Admin	Diagnosis	Help
	DDNS	Advanced NAT	VOIP	IGMP	UPNP	VPN Service	

UPNP Settings


Enable UPNP: ☐

OK Cancel

Figure 3-37: UPNP Configuration

3.5.6 VPN Service

This page allows the user to set VPN Client configuration, including the parameters Protocol Type, Server address, Username and Password.

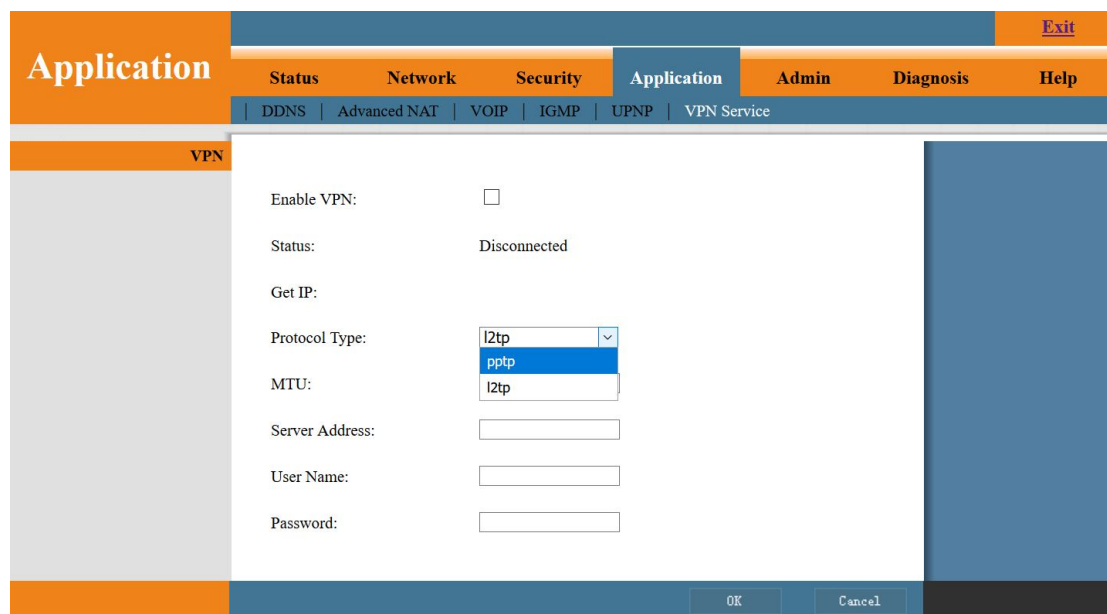

Application	Status	Network	Security	Application	Admin	Diagnosis	Help
	DDNS	Advanced NAT	VOIP	IGMP	UPNP	VPN Service	

VPN

Enable VPN: ☐

Status: Disconnected

Get IP: ☐

Protocol Type:

MTU:

Server Address:

User Name:

Password:


OK Cancel

Figure 3-38: VPN Service Setting

3.6 Admin

3.6.1 User Management

This page allows the user to change normal account password.

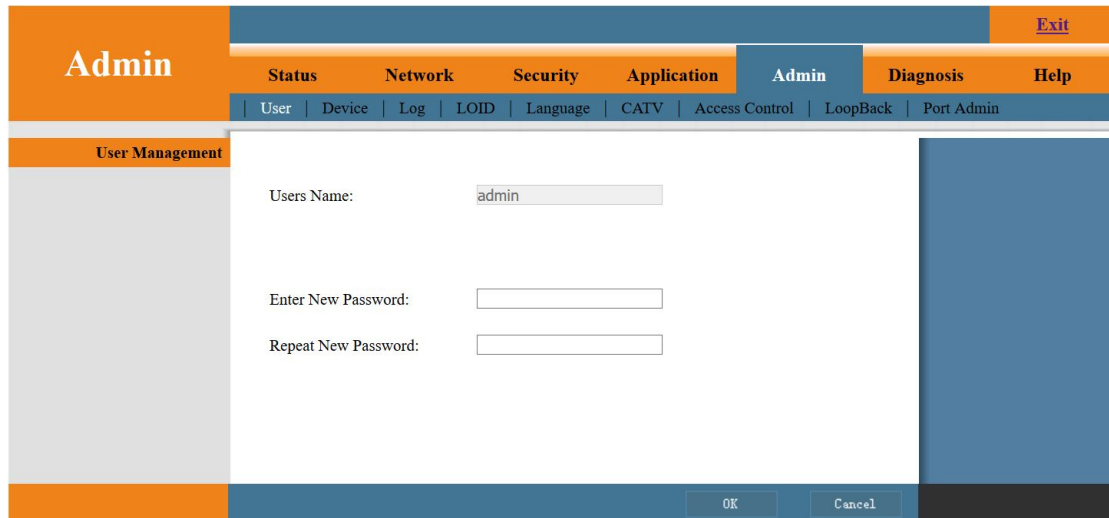


The screenshot shows the 'Admin' interface with the 'User Management' tab selected. The interface includes a sidebar with 'Admin' and 'User Management' options. The main content area has a 'Users Name' field with 'admin' entered, and two empty fields for 'Enter New Password' and 'Repeat New Password'. At the bottom, there are 'OK' and 'Cancel' buttons.

Figure 3-39: User management

3.6.2 Device Management

3.6.2.1 Software Upgrade

This page allows the user to update the software of the device. Click the “Choose File ” button to select the software and then click the “Upgrade” button to update. When the device upgrade succeeded, it would reboot automatically. The whole process of upgrade will take 3 minutes.

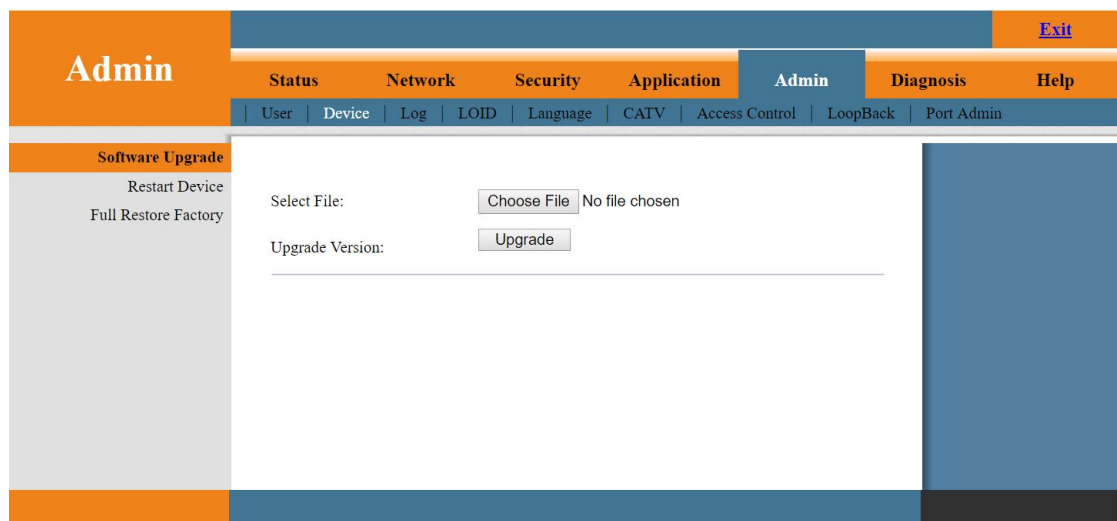

The screenshot shows the 'Admin' interface with the 'Software Upgrade' tab selected. The interface includes a sidebar with 'Admin' and 'Software Upgrade' options. The main content area has a 'Select File' field with a 'Choose File' button and the text 'No file chosen'. Below it, there is an 'Upgrade Version' field with an 'Upgrade' button. At the bottom, there are 'Restart Device' and 'Full Restore Factory' buttons.

Figure 3-40: Software Upgrade

3.6.2.2 reboot

This page allows the user to reboot the device. After reboot, the normal configuration

wouldn't be changed. The whole process of reboot will take 1-2 minutes.

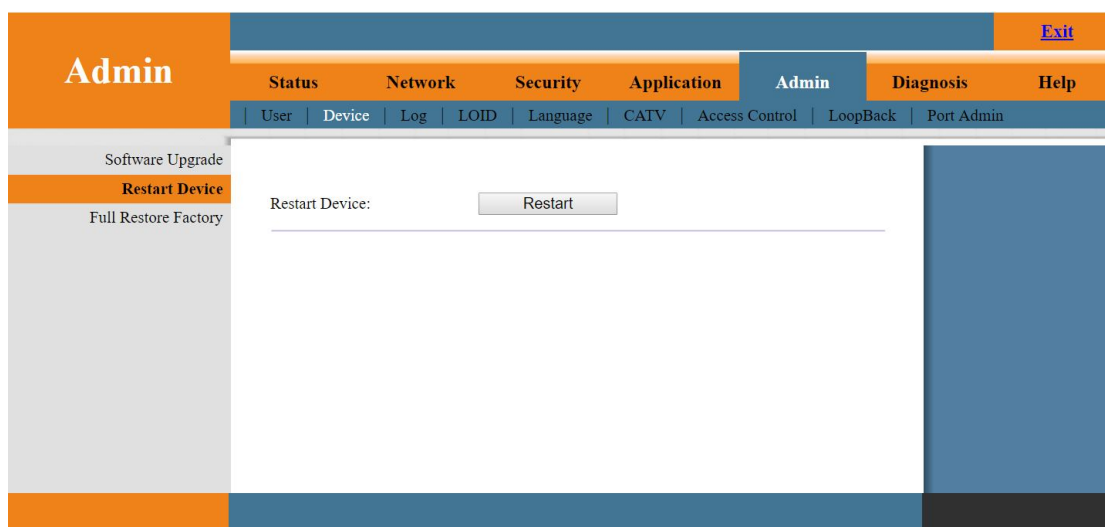


Figure 3-41: Restart Device

3.6.2.3 Restore Default

This page allows the user to restore the device. After restore the device, the whole configuration would be changed to default configuration. The whole process of restore factory will take 1-2 minutes.

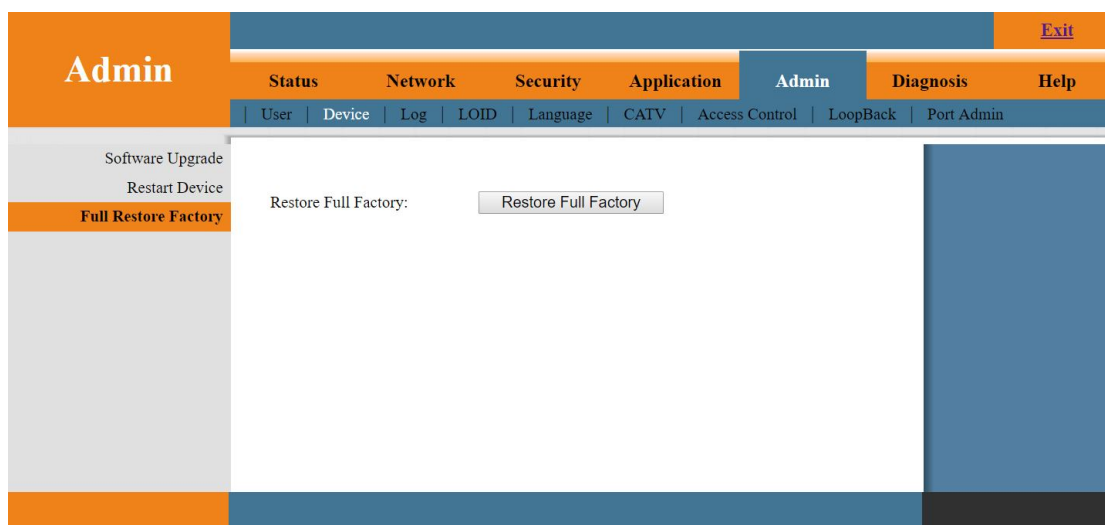


Figure 3-42: Restore Default

3.6.3 Log File Configuration

3.6.2.1 Log Level

This page allows the user to different level about Write Level and Display Level. There are many available options, such as Emergency, Alert, Critical, Error, Warning, Notice, Informational, Debug.

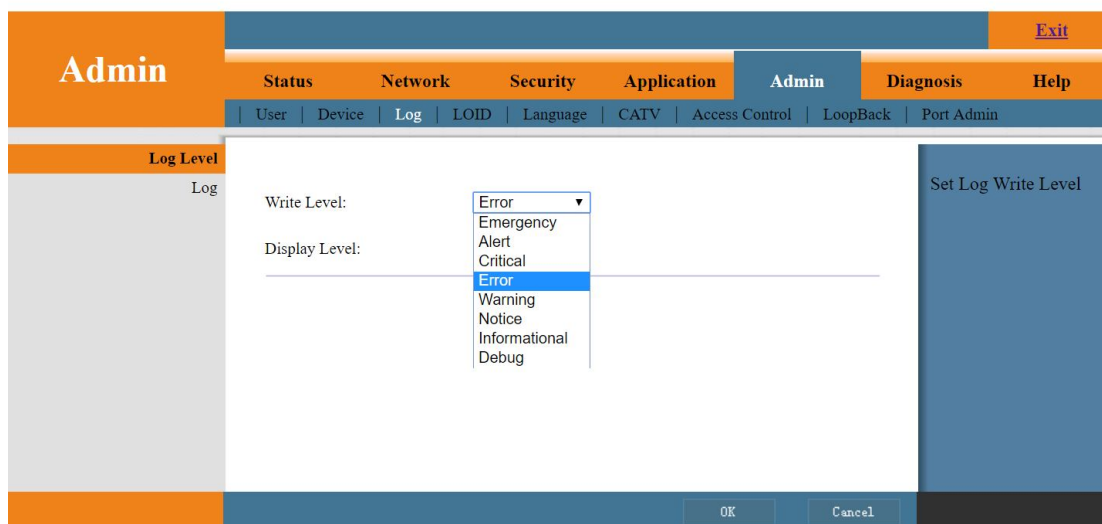


Figure 3-43: Level

3.6.2.2 Log

This page shows the device running status according to the log display level.

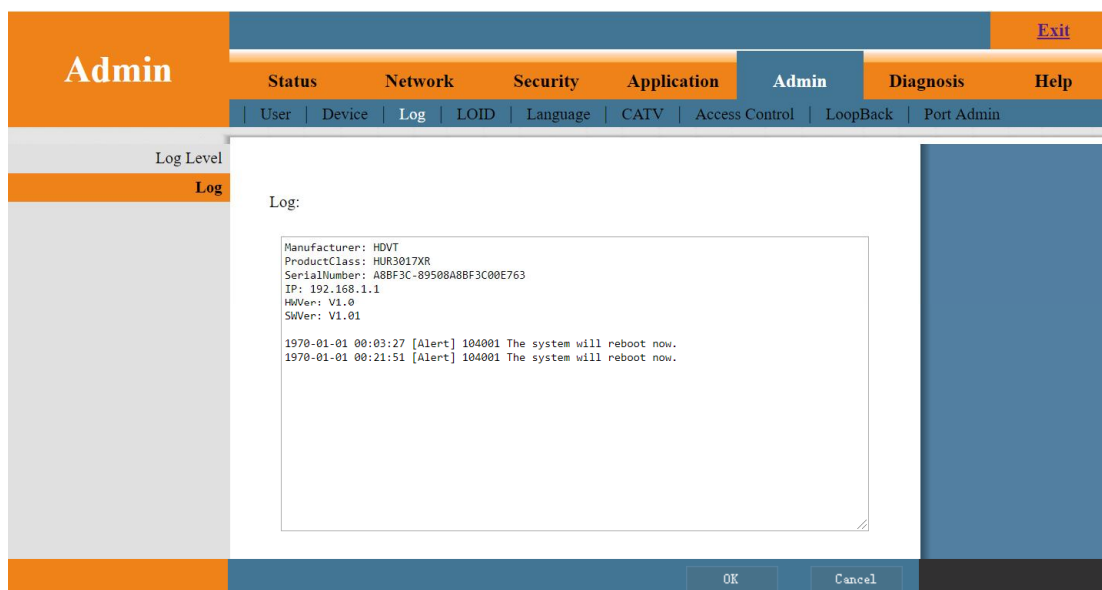


Figure 3-44: Log

3.6.4 LOID

This page allows the user to set the LOID and Password, this is other mode for OLT Authorize


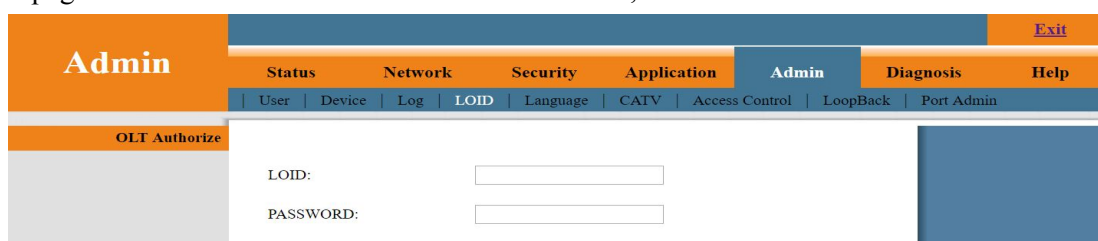


Figure 3-45: LOID Configuration

3.6.5 Language

This page allows the user to choose the language between English and Sample Chinese.

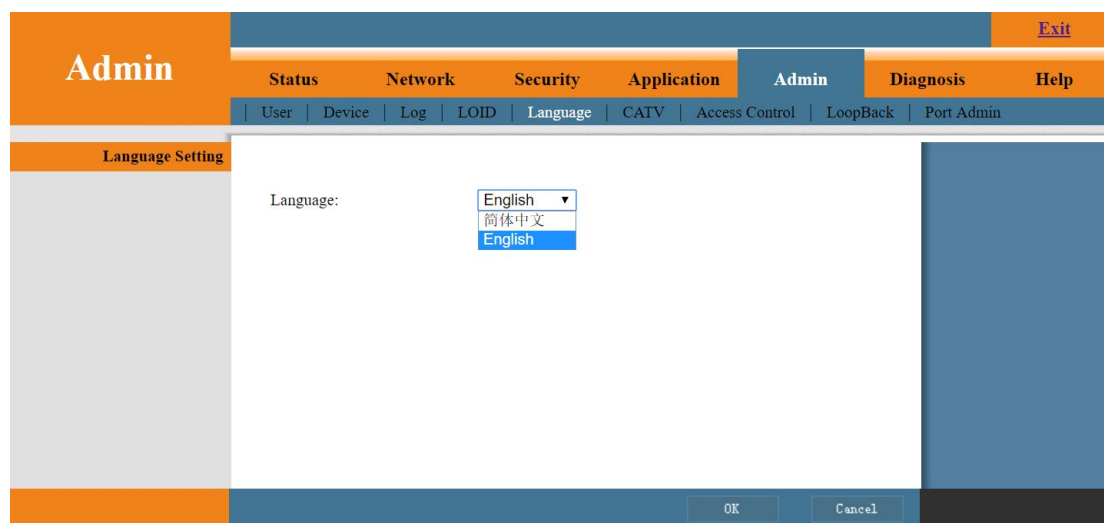


The screenshot shows the 'Language Setting' page. The 'Language' dropdown menu is open, showing three options: 'English', '简体中文', and 'English'. The 'OK' and 'Cancel' buttons are located at the bottom right of the page.

Figure 3-46: Language Setting

3.6.6 CATV

This page allows the user to get the current CATV information and set Output Level Attention value, RF Switch On/Off.

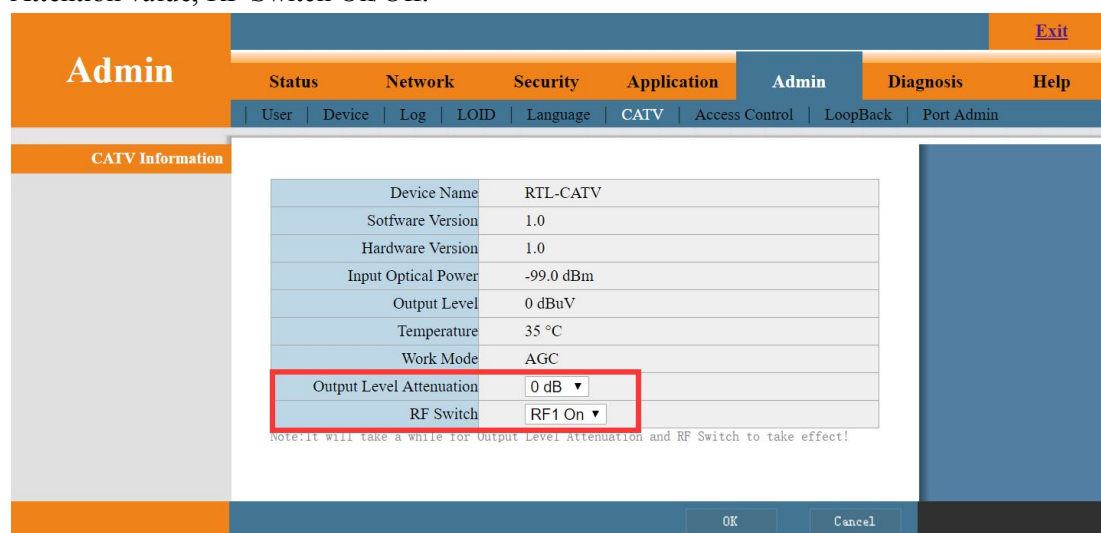

The screenshot shows the 'CATV Information' page. It displays a table with the following information:


Device Name	RTL-CATV
Software Version	1.0
Hardware Version	1.0
Input Optical Power	-99.0 dBm
Output Level	0 dBuV
Temperature	35 °C
Work Mode	AGC
Output Level Attenuation	0 dB
RF Switch	RF1 On

Below the table, there is a note: "Note: It will take a while for Output Level Attenuation and RF Switch to take effect!". The 'OK' and 'Cancel' buttons are at the bottom right.

Figure 3-47: CATV Information

3.6.7 Access Control

This page allows the user to set the access control function, including three access services (telnet, http, Ping) from LAN and WAN side. User also can modify the port about WAN access.

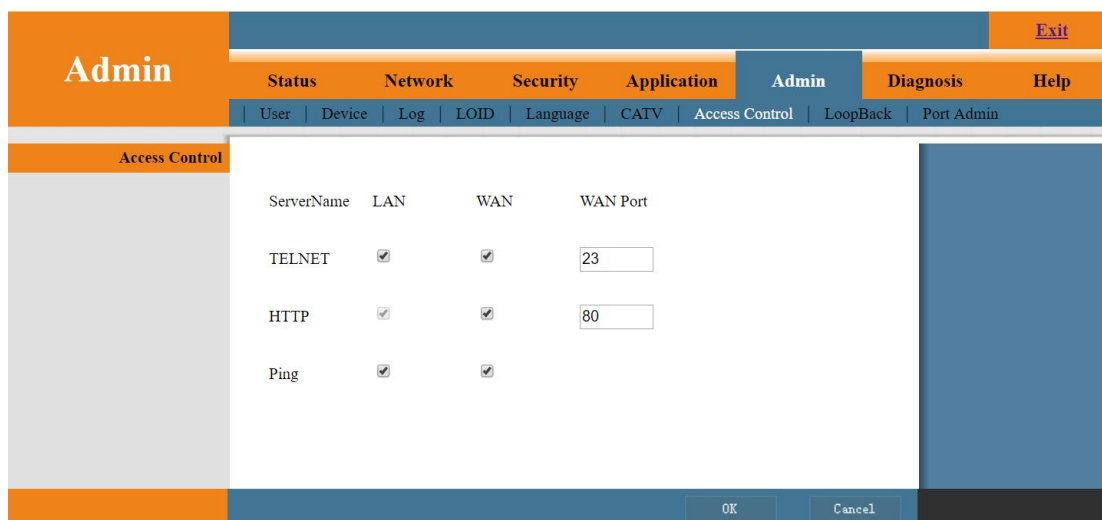


The screenshot shows the 'Access Control' configuration page. The interface has a top navigation bar with 'Admin' selected. Below it, a sub-navigation bar includes 'Status', 'Network', 'Security', 'Application', 'Admin', 'Diagnosis', and 'Help'. The 'Access Control' page contains a table with columns: ServerName, LAN, WAN, and WAN Port. The table has three rows: TELNET, HTTP, and Ping. Each row has checkboxes for LAN and WAN, and a text input for WAN Port. The 'OK' and 'Cancel' buttons are at the bottom right.

ServerName	LAN	WAN	WAN Port
TELNET	☒	☒	23
HTTP	☒	☒	80
Ping	☒	☒	

Figure 3-48: Access Control

3.6.8 LoopBack

This page allows the user to set the Loop Detection, including Sending Interval, Loopback Recovery Time.

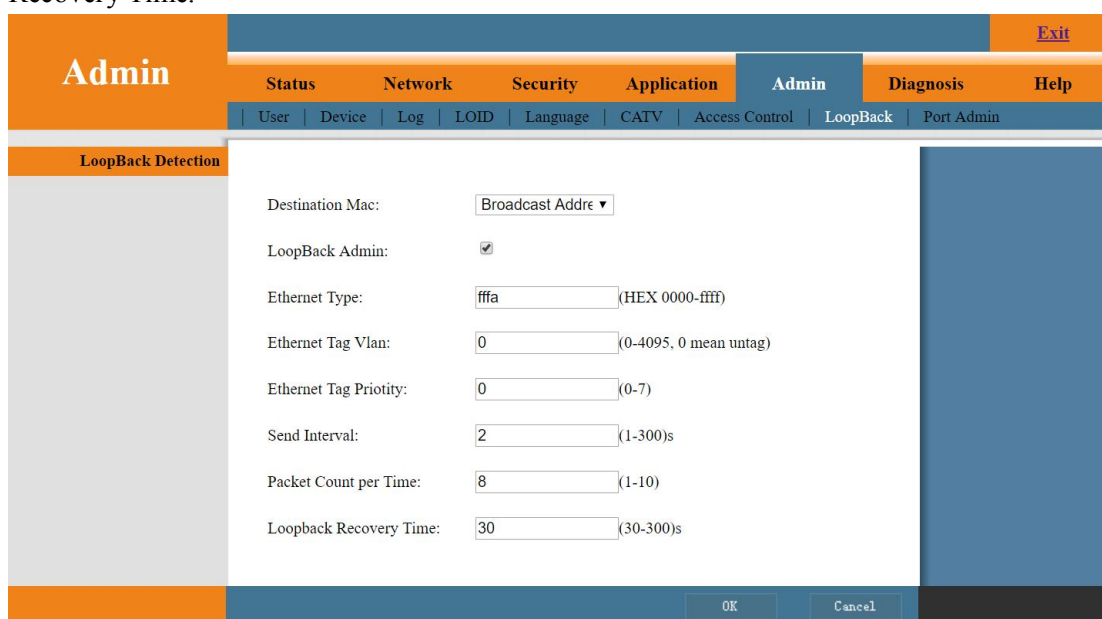

The screenshot shows the 'LoopBack Detection' configuration page. The interface has a top navigation bar with 'Admin' selected. Below it, a sub-navigation bar includes 'Status', 'Network', 'Security', 'Application', 'Admin', 'Diagnosis', and 'Help'. The 'LoopBack Detection' page contains several configuration fields: Destination Mac (Broadcast Addr), LoopBack Admin (checked), Ethernet Type (fffa), Ethernet Tag Vlan (0), Ethernet Tag Priority (0), Send Interval (2), Packet Count per Time (8), and Loopback Recovery Time (30). The 'OK' and 'Cancel' buttons are at the bottom right.

Destination Mac:	Broadcast Addr
LoopBack Admin:	☒
Ethernet Type:	fffa (HEX 0000-ffff)
Ethernet Tag Vlan:	0 (0-4095, 0 mean untag)
Ethernet Tag Priority:	0 (0-7)
Send Interval:	2 (1-300)s
Packet Count per Time:	8 (1-10)
Loopback Recovery Time:	30 (30-300)s

Figure 3-49: Loopback Detection

3.6.9 Port Admin

This page allows the user to set the Port configuration. If the lan port is enabled, user can connect the device by cable. Otherwise, if the lan port is disabled, user can't connect the device by cable.

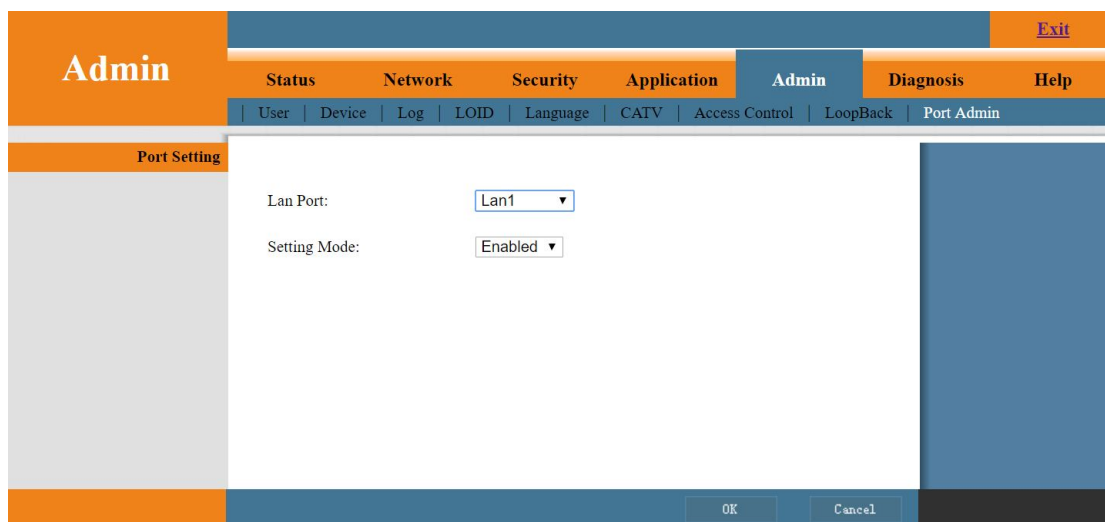


Figure 3-50: Port Setting

3.7 Diagnosis

3.7.1 Network Diagnosis

3.7.1.1 PING/Tracert Test

This page shows about the ping test. Users can diagnose connection status between ONU and other devices.

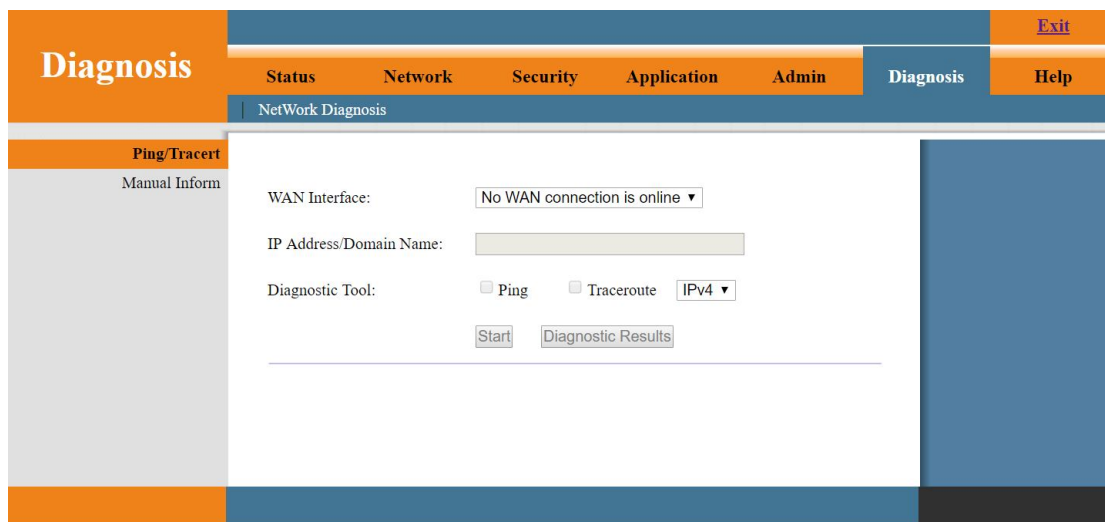


Figure 3-51: PING Diagnosis

Parameter	Illustration
WAN Interface	Select the WAN Connection interface you want to test.
IP Address or Domain Name	Input the destination IP address or domain name you want to ping.

Diagnostic Tool	Select the way between Ping and Traceroute.
-----------------	---

3.7.1.2 Manually Inform

This page allows the user to test tr069 inform function.

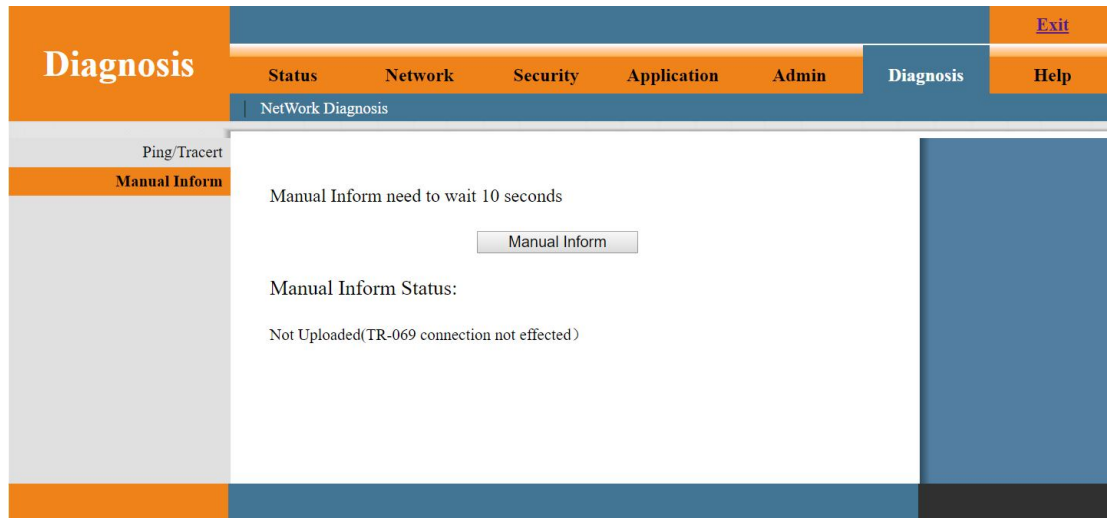


Figure 3-52: Manually Inform Use Tr069

3.8 Help

The Help information of ONU displays instruction and prompt of each web UI.

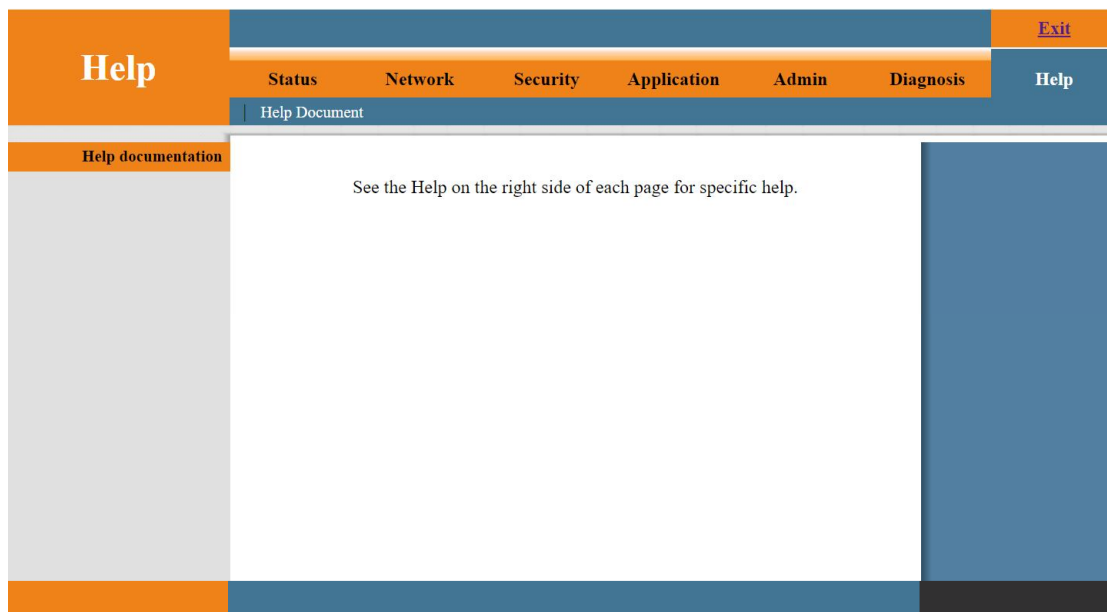


Figure 3-53: Help information

Chapter 4 Examples

4.1 Internet service

There are two configuration methods for Internet service. One works on Bridge WAN and another works on Route WAN.

4.1.1 Requirement

Scenario 1:

Client binds on bridge mode, service VLAN is 10. User client gets IP address from DHCP Server.

Scenario 2:

Client binds on route mode, service VLAN is 10. ONU gets IP address by PPPoE.

4.1.2 Steps

For scenario 1 and scenario 2, it needs to configuring VLAN in OLT side and WAN connection in ONU web.

4.1.2.1 Bridge and Route mode for Internet service

In this example, we take Huawei MA5680T for example, to introduce how to configure Internet service.

Huawei MA5680T Configurations

(1) Create VLAN

```
MA5680T(config)#vlan 10 smart
```

(2) Configure uplink port's VLAN

```
MA5680T(config)#port vlan 10 0/19 1
```

```
MA5680T(config)#interface giu 0/19
```

```
MA5680T(config-if-giu-0/19)#native-vlan 1 vlan 10
```

(3) Configure DBA profile

```
MA5680T(config)#dba-profile add profile-id 12 profile-name test type3 assure 102400 max  
899968
```

(4) Configure line profile

```
MA5680T(config)#ont-lineprofile epon profile-id 11 profile-name test
```

```
MA5680T(config-epon-lineprofile-11)#lldb dba-profile-id 12
```

```
MA5680T(config-epon-lineprofile-11)#commit
```

(5) Configure service profile

```
MA5680T(config)#ont-srvprofile epon profile-id 6 profile-name test
```

MA5680T(config-epon-srvprofile-6)#ont-port eth 4

MA5680T(config-epon-srvprofile-6)#commit

(6) Authorize ONU

MA5680T(config)#interface epon 0/5

MA5680T(config-if-epon-0/5)#ont add 1 0 mac-auth a8bf-3c00-e76a oam ont-lineprofile-id 11 ont-srvprofile-id 6

(7) Configure service-port

MA5680T(config)#service-port 27 vlan 10 epon 0/5/1 ont 0 multi-service user-vlan 10

(8) Configure ONU bridge mode or Route mode by ONU web

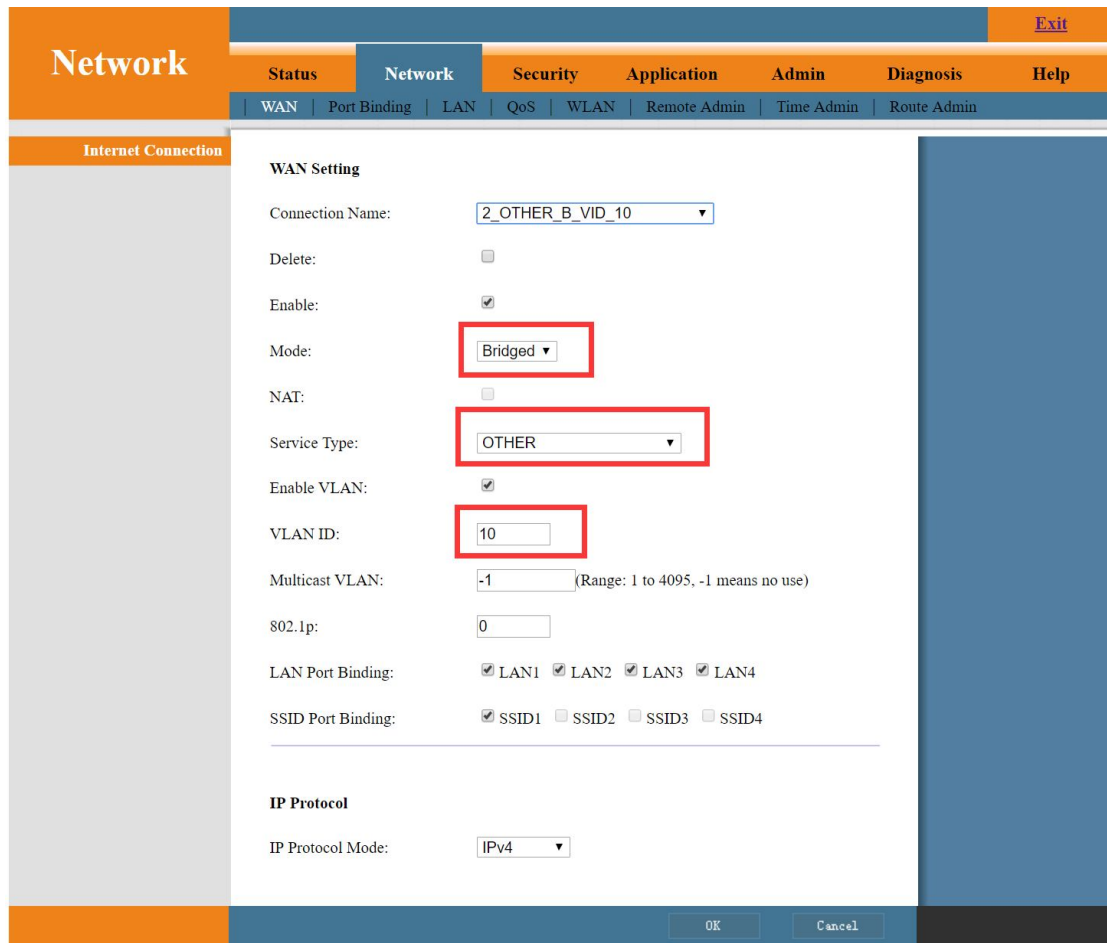


Figure 4-1: Bridge Mode

Attention:

- 1.If you choose bridge mode, please binds correct LAN interface.
- 2.Bridge Internet service for client get the IP Address by PPPoE, if client get the IP Address by DHCP, it would get the IP from LAN DHCP Server.
- 3.Bridge Other service for client get the IP Address by DHCP/PPPoE from ISP

Network		Status	Network	Security	Application	Admin	Diagnosis	Help	
Internet Connection		WAN	Port Binding	LAN	QoS	WLAN	Remote Admin	Time Admin	Route Admin
		WAN Setting Connection Name: 2_INTERNET_R_VID_10 Delete: ☐ Enable: ☒ Mode: Route NAT: ☒ Service Type: INTERNET Enable VLAN: ☒ VLAN ID: 10 Multicast VLAN: -1 (Range: 1 to 4095, -1 means no use) 802.1p: 0 LAN Port Binding: ☒ LAN1 ☒ LAN2 ☒ LAN3 ☒ LAN4 SSID Port Binding: ☒ SSID1 ☐ SSID2 ☐ SSID3 ☐ SSID4						Select Channel Mode: In Bridge mode, Connection Type INTERNET is use for PPPoE, OTHER is use for IPoE(DHCP) and PPPoE.	
		IP Protocol IP Protocol Mode: IPv4 MTU: 1480 WAN IP Settings: WAN IP Mode: PPPoE PPPoE Agent Enable: ☐							
		PPPoE Configuration User Name: pppoetest Password: Keep alive Time: 60 (5~60)Seconds PPPoE Mode: Continuous Service Name:							
		OK Cancel							

Figure 4-2: Route Mode for PPPoE

Attention:

- 1.If you choose Route mode, please check the service is Internet, otherwise the WAN Connection get the ip address, the user client could not surf the internet.
- 2.Please enable LAN DHCP Server, otherwise user client couldn't get the IP address from LAN DHCP Server.

Chapter 5 FAQ

1. After power, why are all the lights lit?

Reasons:

- 1) Power connection errors;
- 2) Power is not normal.

Solution:

- 1) Check that the power cable is connected;
- 2) The rear panel of the power supply is turned on.

2. Why does LED of LAN not light?

Reasons:

- 1) Network cable is damaged or loose connection;
- 2) Cable type errors;
- 3) Long lines outside the allowable range.

Solution:

- 1) Replace the network cable, and pay attention to the standard Ethernet cable must be parallel or crossing lines.

3. Why is LED of LOS always blinking?

Reasons:

- 1) Fiber failure;
- 2) Center office equipment failure.

Solution:

- 1) Inspect fiber is connected property, is connected to the correct connector, optical power is normal;
- 2) Contact your operator.

5. Why does LED of PON flashes instead of always on?

Reasons:

- 1) Fiber optic connector is loose;
- 2) Central office equipment failure;
- 3) Fiber optic connector is dust.

Solution:

- 1) Inspect fiber is connected property;
- 2) Cotton ball with alcohol swabbing fiber optic connectors;
- 3) Contact your operator.

3. Why does ONU stop working after working for a long time?

Reasons:

- 1) Power supply is not working properly;
- 2) The equipment from overheating.

Solution:

- 1) Check if there is contact with abnormal voltage is too high or too low;

2) Check the ambient conditions, vents are nominal ventilation.